

eliwell


by **Schneider** Electric

IDPanel 978

Instruction manual

9MA00274.00 11/16

Instructions translated from the original

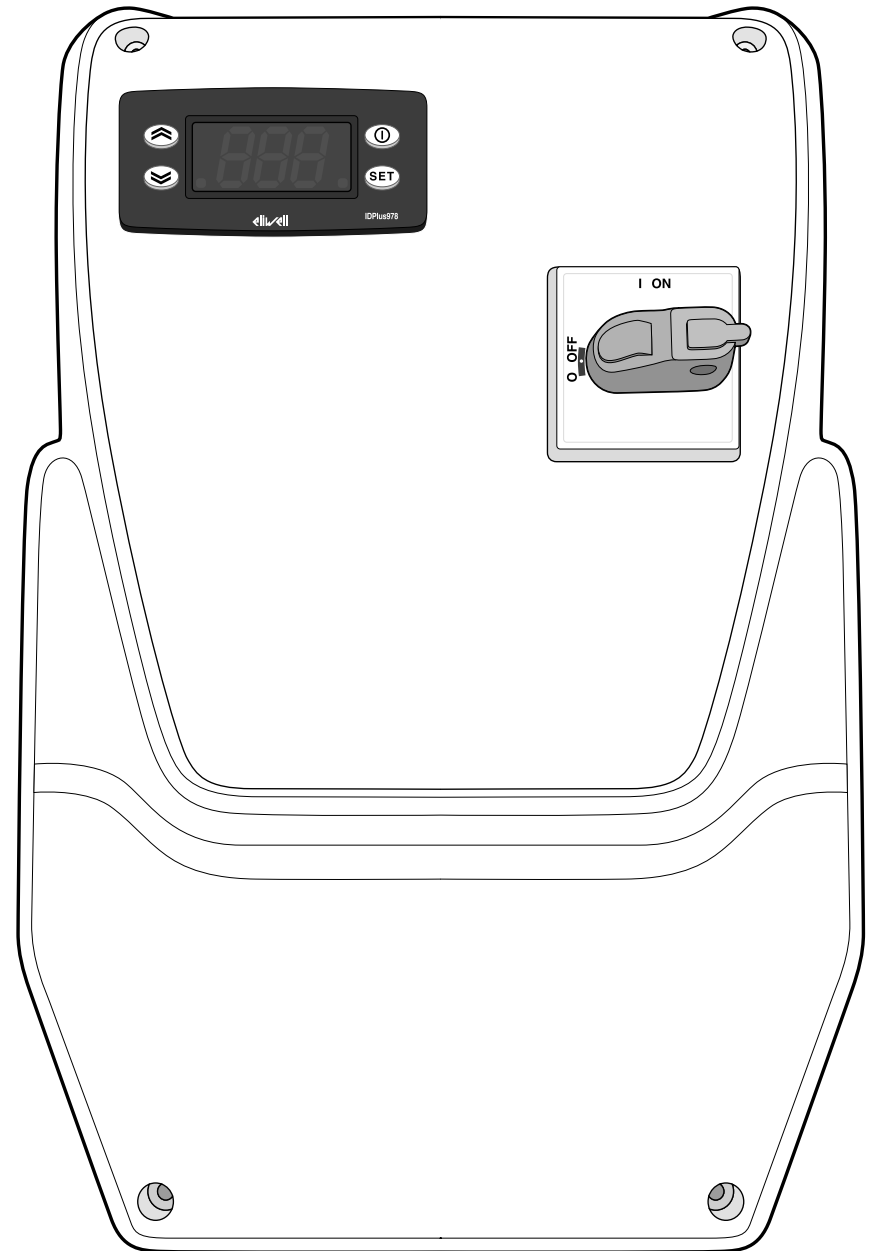

Information ownership

The information given in this document contains general descriptions and/or technical characteristics concerning the performance of the products contained. This document is not intended to replace and must not be used to determine the suitability and reliability of these products for any users' specific applications. Each user or integrator is responsible for performing the risk analysis, evaluation and appropriate and complete testing of the products according to the specific application or use in question. Eliwell and its sister companies or subsidiaries shall not be legally or economically liable for any incorrect use of the information contained in this documentation.

If you have any suggestions for improvement or modification, or find any errors in this publication, please contact us.

This document may not be reproduced wholly or partly in any form and using any electronic or mechanical means, including photocopies, without the express written authorisation of Eliwell.

The installation and use of this product must comply with all applicable state, regional and local safety regulations. For safety reasons and to ensure greater compliance with the data of the documented system, component repairs must be performed exclusively by qualified staff.

When using devices for applications with technical safety requirements, comply with the relevant instructions.

Failure to comply with this information can result in injury or damage to the equipment.

© 2016 Eliwell Controls srl

Contents

Information ownership.....	2
Safety information	4
Information about the manual	8
Receipt, handling and storage	10
Storage and handling.....	10
Product identification.....	10
Description of the equipment	12
General description.....	12
Inputs and outputs	13
Parameters.....	14
Applications.....	15
Installation of the equipment.....	20
Installation warnings	20
Install IDPanel 978.....	21
Installer procedure	26
Use of the equipment.....	29

Operator procedures.....	29
Maintenance.....	32
Maintenance warnings	32
Controller maintenance.....	33
Routine maintenance	37
Diagnostics.....	38
Alarms	38
Troubleshooting.....	42
Assistance.....	42
Technical data	44
Technical specifications	44
Electrical connections	47
User parameter table	52
Installer parameter table	54
Enclosures	61
Single-phase version annexes.....	61
Three-phase version annexes	66
Drilling template	71

Safety information

Important information

Read these instructions carefully and visually inspect the equipment to familiarise yourself with the device before attempting to install it, put it into operation, overhaul or service it. The following warning messages may appear anywhere in this documentation or on the equipment to warn of potential dangers or to call attention to information that can clarify or simplify a procedure.



The addition of this symbol to a danger warning label indicates the existence of an electrical danger that could result in personal injury should the user fail to follow the instructions.



This is the safety warning symbol. It is used to warn the user of the potential dangers of personal injury. Observe all the safety warnings accompanied by this symbol to avoid the risk of serious injury or death.

DANGER

DANGER indicates a dangerous situation that, unless avoided, **will result in death** or cause serious injuries.

WARNING

WARNING indicates a potentially dangerous situation which, **if not avoided**, could result in death or serious injury.

CAUTION

CAUTION indicates a potentially dangerous situation which, **if not avoided**, could result in minor or moderate injury.

NOTICE

NOTICE used in reference to procedures not associated with physical injuries.

NOTE

The electrical panel (device) must be installed and repaired only by qualified staff. Eliwell accepts no responsibility for any consequences resulting from the use of this material.

A qualified person is someone who has specific skills and knowledge regarding the structure and the operation of electrical equipment and who has received safety training on how to avoid the inherent dangers.

Permitted use

This device is used to control cold rooms in commercial refrigeration sectors.

For safety reasons, the device must be installed and used in accordance with the instructions provided.

The device must be adequately protected from water and dust with regard to the application and the inside must only be accessible using tools.

Prohibited use

Any use other than that described in the previous paragraph, Permitted Use, is strictly forbidden.

The relays supplied are electromagnetic and the contacts are subject to wear. The protection devices required by international or local laws must be installed outside the device.

Liability and residual risks

The liability of Eliwell Controls srl is limited to the correct and professional use of the product according to the directives referred to herein and in the other supporting documents, and does not cover any damage (including but not limited to) the following causes:

- unspecified installation/use and, in particular, in contravention of the safety requirements of established legislation and/or specified in this document;
- installation/use on equipment which does not comply with established legislation and technical standards;
- tampering with and/or modification of the product.

Disposal

The device must be subjected to separate waste collection in compliance with the local legislation on waste disposal.

Product related information

DANGER

RISK OF ELECTRIC SHOCK, EXPLOSION OR ELECTRIC ARC

- Turn off all devices, including connected devices, before removing any covers or doors, or installing/uninstalling accessories, hardware, cables, or wires.
- To check that the system is powered down, always use a voltmeter properly calibrated to the nominal voltage value.
- Before restarting the unit, replace and secure all covers, hardware accessories, cables, and check for a good ground connection.
- Use this equipment and all connected products only at the specified voltage.
- Comply with all the standards regarding accident protection and the local applicable safety directives.

Failure to follow these instructions will result in death or serious injury.

DANGER

RISK OF EXPLOSION

- Install this device only in areas known to be free from dangerous atmospheres.
- Install and use this device only in places where there is no risk.

Failure to follow these instructions will result in death or serious injury.

WARNING

INCORRECT OPERATION OF THE DEVICE

- The signal cables (probes, digital inputs, communication, and relative power supplies) must be laid separately from the power cables.
- Every implementation of this device must be tested individually and completely in order to check its proper operation before putting it in service.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Information about the manual

Document scope

This document describes the IDPanel 978 electrical panel, including all information on installation and wiring.

Use this document to:

- install, use and maintain the electrical panel.
- connect the electrical panel to a supervisor.
- become familiar with the functions of the electrical panel.

Note: read this document and all related documents carefully before installing, operating or maintaining the electrical panel.

Note regarding validity

This document is valid for the following versions of the IDPanel 978:

- Single-phase, thermal relay 5.5...8 A 230 V ac
- Single-phase, thermal relay 8...11 A 230 V ac
- Three-phase, thermal relay 3.7...5.5 A 400 V ac
- Three-phase, thermal relay 5.5...8 A 400 V ac

The technical characteristics of the devices described in this manual can also be consulted on-line. The characteristics illustrated in this manual should be identical to those which can be consulted on-line.

In line with our policy of continuous improvement, we may revise the contents to improve clarity and accuracy. If you note any discrepancies between the manual and the information consulted on-line, please use the latter as a reference.

Related documents

Document title	Reference document code
Instruction manual IDPanel 978 (this manual)	9MA00274.00 (IT)
	9MA10274.00 EN)
IDPlus user manual	9MA00053 (IT)
	9MA10053 (EN)
Schneider Electric component documentation	see http://www.schneider-electric.com

You can download these technical publications and other technical information from our website at: www.eliwell.com

Receipt, handling and storage

Storage and handling

Warnings

<i>NOTICE</i>

INOPERABLE DEVICE

- | |
|--|
| <ul style="list-style-type: none">• Consult the manufacturer and check the warranty conditions if the product must be stored for long periods.• Protect the panel appropriately from humidity, vibrations and knocks.• Check that all the cables are inside the box and that the cover is closed and locked. |
|--|

Failure to follow these instructions can result in equipment damage.

Environmental conditions


The electrical equipment is designed to withstand the effects of shipping and storage temperatures between -25 °C and +70°C. For temperatures beyond this range, take appropriate precautions for further protection.

See “Environmental storage conditions” on page 46.

Product identification

Pack contents


The following elements are supplied in the sales package:

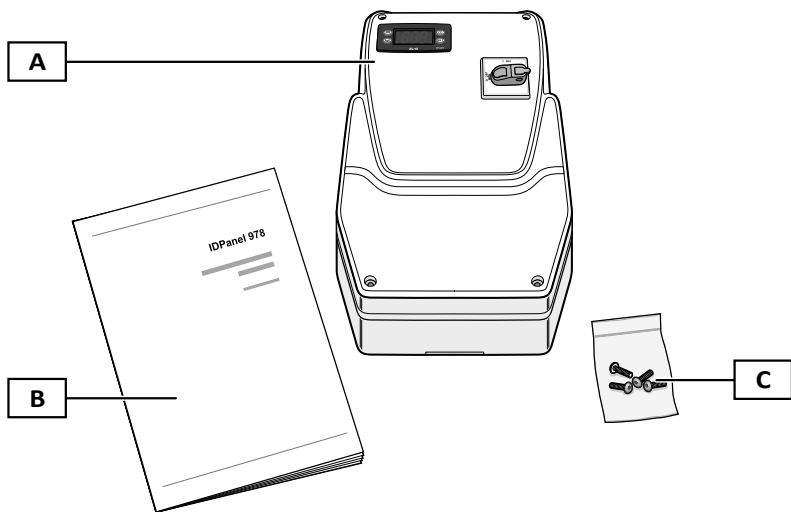

Part	Description
A	IDPanel 978
B	Instruction manual and drilling template (this document)
C	Four screws for closing the panel cover

Identification label

The information contained in the identification label is important for requesting assistance, maintenance or any accessories.

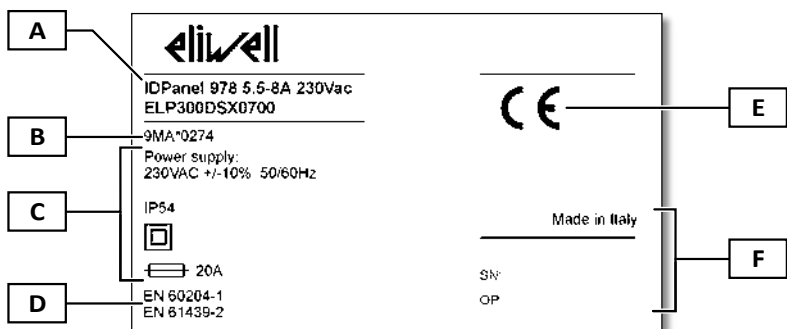

Part	Description
A	Product identification data (name, basic characteristics, code)
B	Reference instruction manual code (this manual)
C	Technical data
D	Reference standards
E	CE marking
F	Production data

Description of the equipment

General description

Introduction


IDPanel 978 is an electrical panel including an electronic controller and electro-mechanical components for controlling both static and ventilated refrigerating units.

Versions

IDPanel 978 is available in several versions, for controlling three-phase or single-phase electric heaters and compressors:

- Single-phase, thermal relay 5.5...8 A 230 V ac
- Single-phase, thermal relay 8...11 A 230 V ac
- Three-phase, thermal relay 3.7...5.5 A 400 V ac
- Three-phase, thermal relay 5.5...6 A 400 V ac

Main components

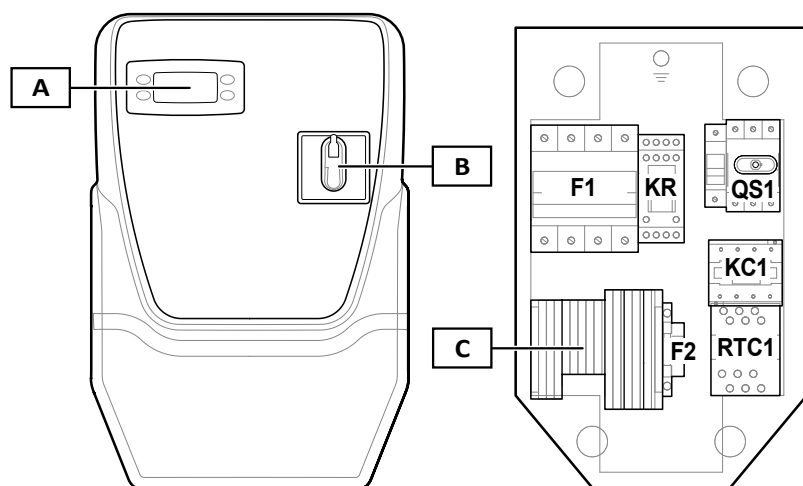

Part	Description
A	IDPlus 978 electronic controller
B	Disconnecter handle
C	Main terminal board
F1	Power component protection fuse holder
KR	Relay with four change-over contacts
QS1	General disconnecter with door lock
KC1	Contactor
RTC1	Thermal relay
F2	Controller protection fuse holder

Note: the illustration refers to the three-phase version.

Inputs and outputs

Introduction

Via the controller, the IDPanel 978 manages:

- two probe inputs
- one multi-purpose input (digital or probe) DI1 / Pb3
- one digital input DI2
- four digital outputs
- one TTL serial port

The input and output configuration must be defined when configuring the panel.

Probe input

The probe input 1 is used for the temperature sensor to control the compressor, the probe input 2 for the temperature sensor to control the defrost or evaporator fans.

Note: it is possible to connect a probe input 3, in place of the digital input 1.

Digital inputs

The digital inputs can be used for:

- energy saving algorithms.
- enabling defrost
- AUX management
- door microswitch
- stand-by
- External alarm
- deep cooling
- pressure switch
- HACCP alarms

Note: the digital input 1 can be used as probe input 3.

Relay

The four digital outputs can be used to manage:

- evaporator fans
- defrosting element
- compressor
- lights/AUX
- alarm
- stand-by

Digital output 2 and digital output 3 are managed indirectly, respectively via a relay and a contactor plus a thermal relay.

TTL serial port

The TTL serial port has the following functions:

- connect the panel to supervision systems (Televis**System** or other supervisor via Modbus communication) or connect a second digital input.
Note: communication via a supervisor precludes the use of a second digital input and requires an interface module TTL-RS485 Bus**Adapter** 150 (optional).
- use the Copy Card (optional) to configure the controller.

Parameters

The parameters

The input and output configuration and operating logics of the controller are defined via the parameters available directly on the interface.

The controller is pre-configured with a parameters map. The map values can be edited and reset if necessary.

Visibility of parameters

The parameters have two levels of visibility:

- user: parameters for basic controller configuration. They may be protected by the user password **PA1** and are given in the “User parameter table” on page 52
- installer: organised in folders, including the user parameters and other parameters for advanced controller configuration. They may be protected by the installer password **PA2** and are given in the “Installer parameter table” on page 54

Applications

Introduction

The applications are sets of default parameters which facilitate the controller set-up. The values of the application are loaded automatically in the parameters map and can then be edited if necessary to better respond to the actual application.





Default applications

There are four default applications (**AP1**, **AP2**, **AP3**, **AP4**), which are differentiated mainly for the configuration of the digital outputs.






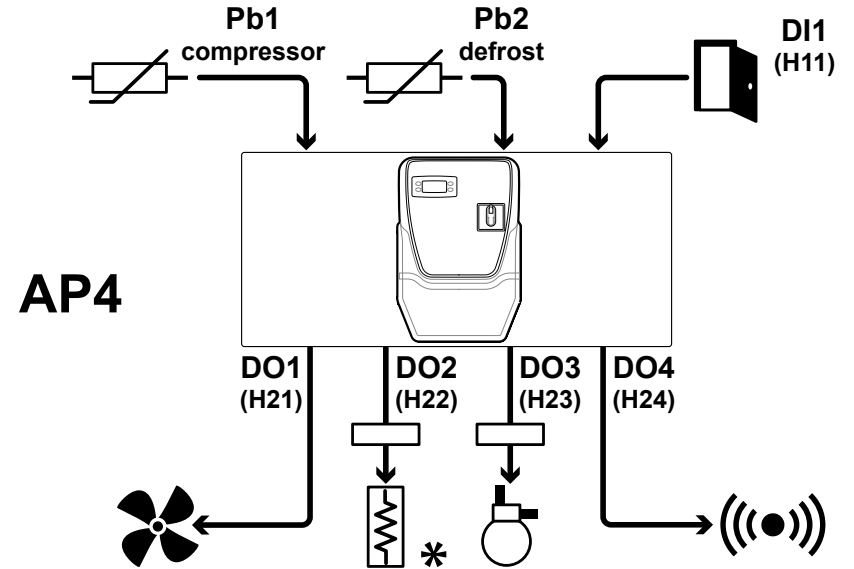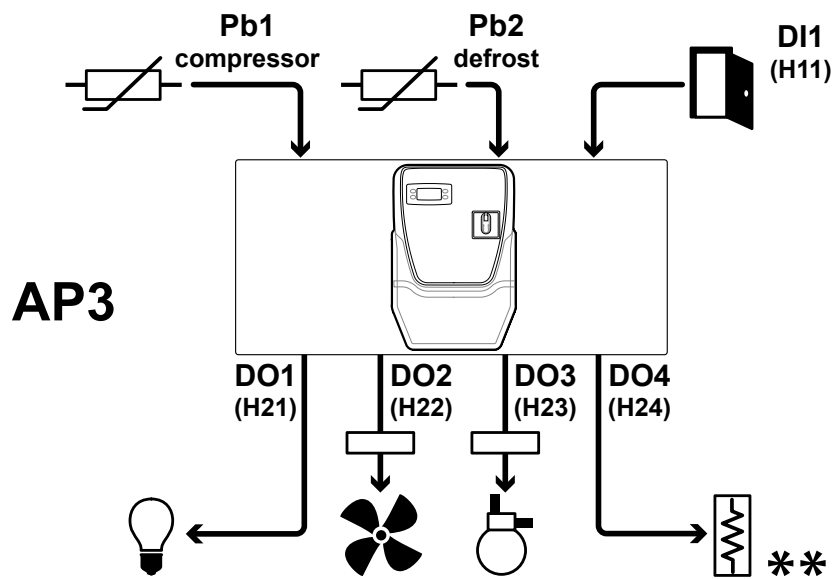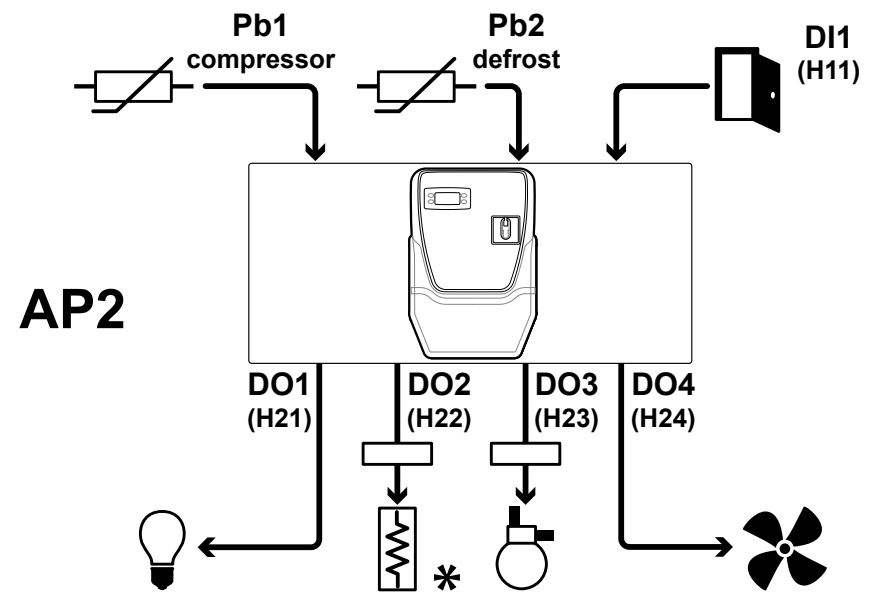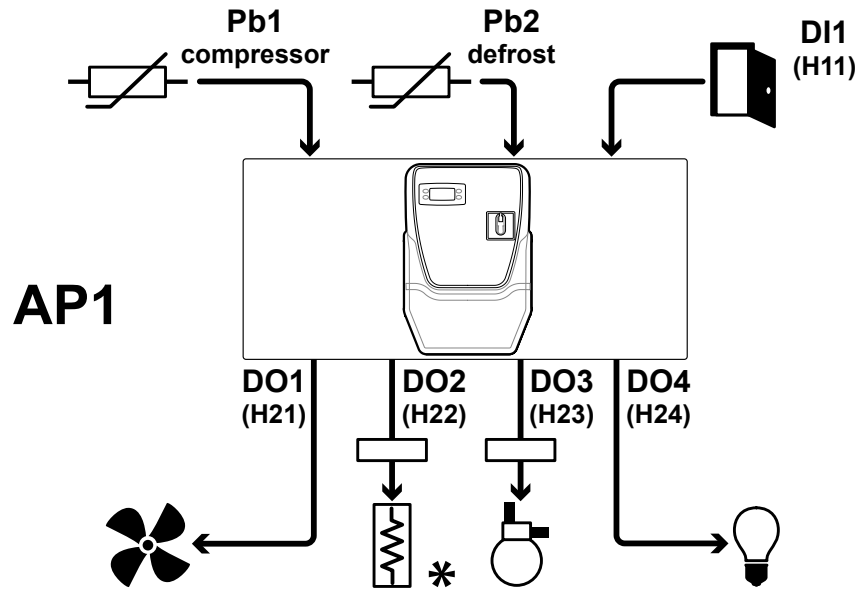


Application AP1 corresponds to the factory settings.

Application	Digital output 1 (DO1) parameter H21	Digital output 2 (DO2) parameter H22	Digital output 3 (DO3) parameter H23	Digital output 4 (DO4) parameter H24	Probe input (Pb1)	Probe input (Pb2)	Digital input 1 (DI1)
AP1	Evaporator fans (3)	Defrosting element (2)	Compressor (1)	Light (5)	Compressor	Defrost	Door switch
AP2	Light (5)	Defrosting element (2)	Compressor (1)	Evaporator fans (3)	Compressor	Defrost	Door switch
AP3	Light (5)	Evaporator fans (3)	Compressor (1)	Cycle inversion defrost (2)	Compressor	Defrost	Door switch
AP4	Evaporator fans (3)	Defrosting element (2)	Compressor (1)	Alarm (4)	Compressor	Defrost	Door switch

To know the default values of the applications for all parameters, see the “Installer parameter table” on page 54.






Legend

Part	Description	Part	Description
 compressor	Probe input 1, temperature sensor for controlling the compressor	 Defrosting element Note *: electric defrost. Note **: inverse cycle defrost.	
 defrost	Probe input 2, temperature sensor for controlling the defrost	 Compressor	
 Door switch		 Light	
 Evaporator fans		 Alarm	





Controller interface



Controller state






Resource controller	Display	Disconnect handle position	Description
On	On	ON	The controller is on in all functions (unless anomalies are reported)
On	“LOC”	ON	Push-button panel locked. The secondary functions (long press) of buttons  ,  and  are disabled and the setpoint value cannot be modified.
Stand-by	“OFF”	ON	The controller is on but all utilities are disabled and no regulation is done
Off	Off	OFF	The controller is off

Buttons

Button	Function (short press)	Function (long press)
	<ul style="list-style-type: none"> • Scroll through the menu items • Increase the values 	Enable manual defrosting
	<ul style="list-style-type: none"> • Scroll through the menu items • Decrease the values 	Settable function (parameter H32)
	<ul style="list-style-type: none"> • Return to the higher menu level • Confirm the parameter value 	Enable standby (when not inside the menus)
	<ul style="list-style-type: none"> • Confirm the commands • Access the “Machine Status” menu • Display any alarms (if present) 	Access the “Programming” menu

LED

Note: when switched on the controller runs a test (lamp test) to check that the display is intact and operating correctly: the digits and the LEDs blink for a few seconds.

Part	Description	Part	Description
	Permanently on: reduced set on Blinking: access to installer parameters		Permanently on: alarm tripped Blinking: alarm acknowledged.
	Permanently on: compressor active Blinking: delay, a protection or a blocked start-up		Permanently on: defrost active Blinking: manual defrost activation or via digital input
	Permanently on: fans on	AUX	Permanently on: AUX output active Blinking: manual deep cooling activation or via digital input
°C	Permanently on: °C setting (parameter dro =0)	°F	Permanently on: °F setting (parameter dro =1)

Menu

Two menus are available:

Menu	Function	List of folders
Machine state	Display probe values Display and/or edit the setpoint Display any alarms present	AL: alarms file * SEt: set point setting folder Pb1: probe 1 value file - Pb1 Pb2: probe 2 value file - Pb2 Pb3: probe 3 value file - Pb3 ** Note *: present only if alarms are active. Note **: present only if the probe is present.
Programming:	Set the parameters	User parameters: "User parameter table" on page 52 Installer parameters: "Installer parameter table" on page 54

Installation of the equipment

Installation warnings

DANGER

RISK OF ELECTRIC SHOCK, EXPLOSION OR ELECTRIC ARC

- The panel must only be installed by persons who are able to work in safety.
- Turn off all devices, including connected devices, before removing any covers or doors, or installing/uninstalling accessories, hardware, cables, or wires.
- To check that the system is powered down, always use a voltmeter properly calibrated to the nominal voltage value.
- Before restarting the unit, replace and secure all covers, hardware accessories, cables, and check for a good ground connection.
- Use this equipment and all connected products only at the specified voltage.
- Comply with all the standards regarding accident protection and the local applicable safety directives.

Failure to follow these instructions will result in death or serious injury.

DANGER

RISK OF EXPLOSION

- Install this device only in areas known to be free from dangerous atmospheres.
- Install and use this device only in places where there is no risk.

Failure to follow these instructions will result in death or serious injury.

⚠ WARNING

INCORRECT OPERATION OF THE DEVICE

- The signal cables (probes, digital inputs, communication) must be laid separately from the power cables.
- Every implementation of this device must be tested individually and completely in order to check its proper operation before putting it in service.

Failure to follow these instructions can result in death, serious injury, or equipment damage.


NOTE. For correct and accurate operation of the equipment, use exclusively Eliwell probes.

Install IDPanel 978

Procedure sequence

The following sequence is suggested for installing the panel:

1. "Prepare the panel at the bench" on page 22
2. "Mount the panel on the wall" on page 23 and check the distances
3. "Connect the wires" on page 23
4. "Calibrate the thermal relay on the compressor" on page 24
5. "Close the panel" on page 25
6. "Configure the controller" on page 26
7. "Check the correct operation of the panel" on page 26

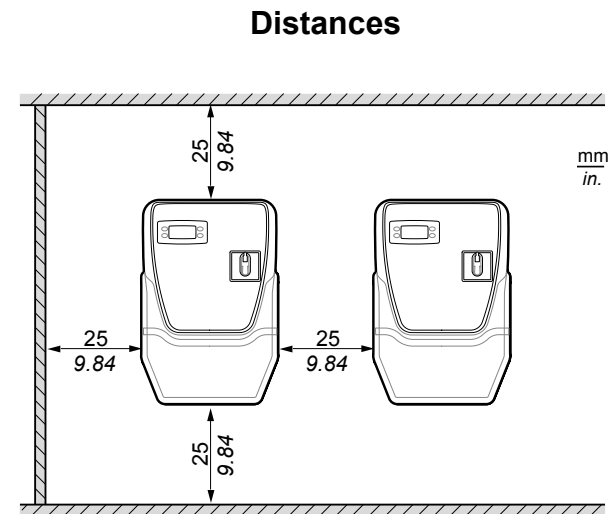

Comply with the indicated distances when installing the product (see above Figure).


⚠ WARNING

INCORRECT OPERATION OF THE DEVICE


- Do not place these devices near or above any devices which could cause overheating.
- Install the device in a point that guarantees the minimum distances from all structures and adjacent equipment as indicated in this document.
- Install all equipment in conformity with the technical specifications given in the respective documentation.

Failure to follow these instructions can result in death, serious injury, or equipment damage.


Prepare the panel at the bench

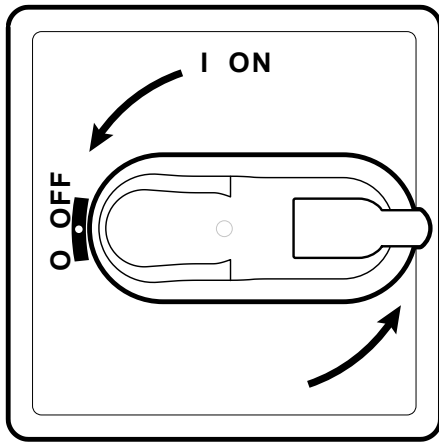


1. Turn the disconnector handle to OFF and open the cover.

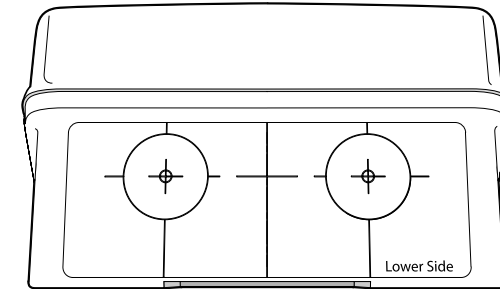

2. Place the drilling template on the lower side of the panel.

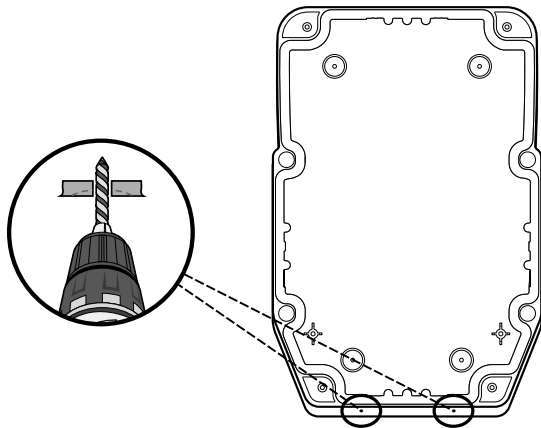


3. Drill the holes for the cable clamps (one for power cables and one for signalling cables).

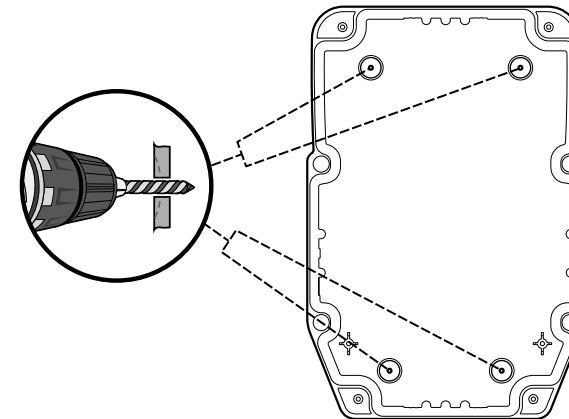


4. Drill the holes in the bottom of the panel in the marked areas.

Mount the panel on the wall

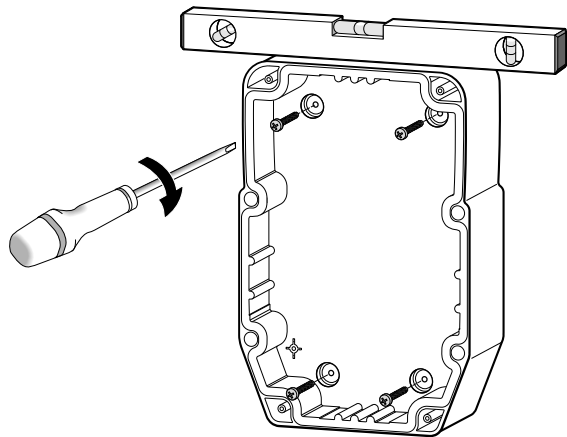

1. Fix the panel to the wall using four screws (not supplied) suited to the wall thickness.

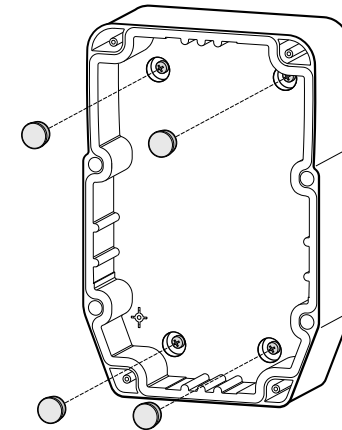

2. Optional. Insert the TDI 20 screw covers (not supplied).

Connect the wires

Connect the main terminal board, the thermal relay (**RTC1**) and the disconnecter (**QS1**), referring to the data given in the “Electrical connections” on page 47. Use suitable cable/pipe clamps.


NOTICE

INOPERABLE DEVICE


If you wish to configure the utilities differently to what set in the factory settings, pay attention to the characteristics of each digital output and adapt the wiring diagram provided in annex.

Failure to follow these instructions can result in equipment damage.


Calibrate the thermal relay on the compressor

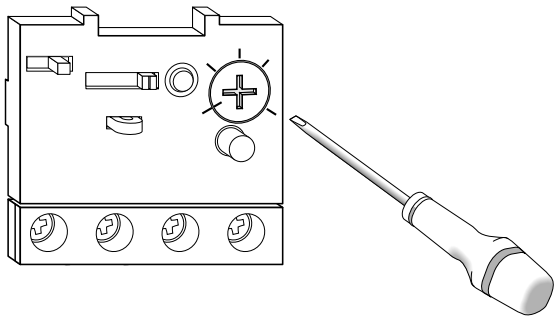


1. Turn the adjusting screw on the thermal relay (**RTC1**) and set an absorption greater than that indicated on the compressor data plate.

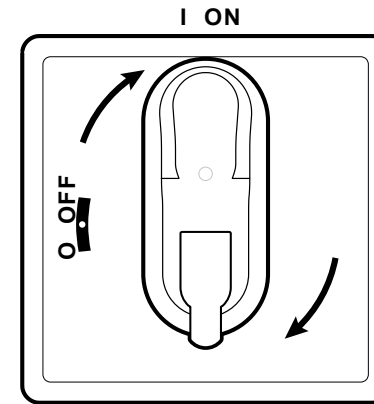


2. Check that all the cables are inside the box, close the cover and turn the disconnecter handle to ON.

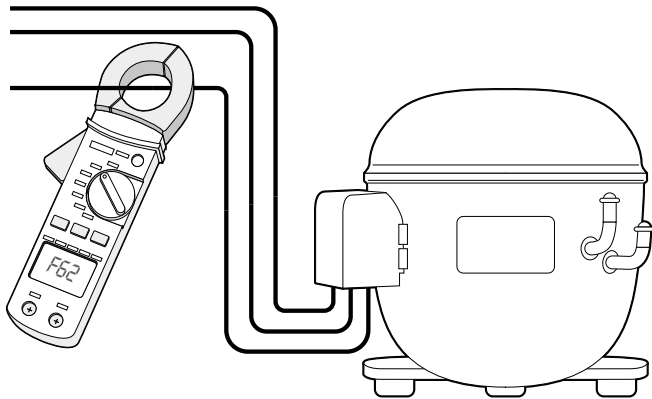

3. Check the effective absorption of the compressor with an ammeter.

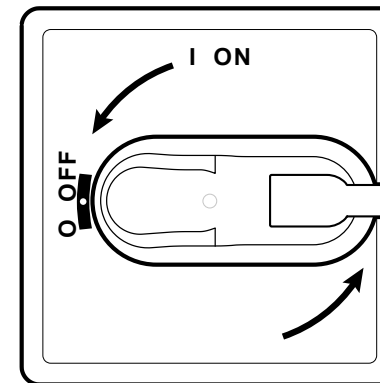


4. Turn the disconnecter handle to OFF and open the cover.

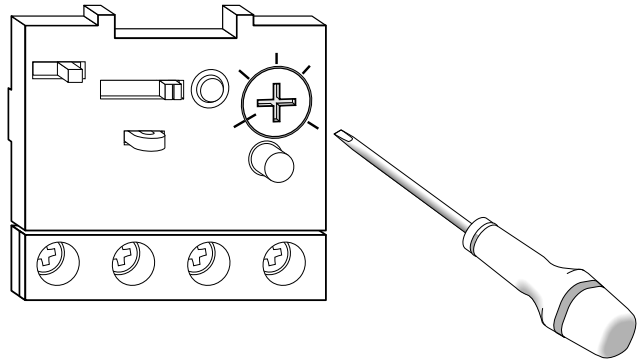


5. Turn the adjusting screw on the thermal relay (**RTC1**) and set the effective absorption of the compressor.

Close the panel

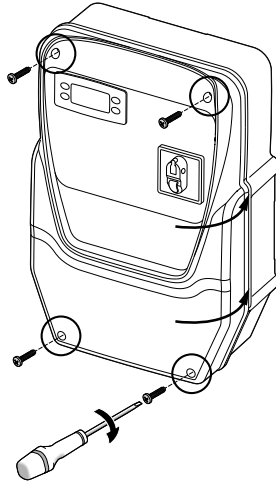

1. Check that all the cables are inside the box, close the cover and lock with the four screws provided.

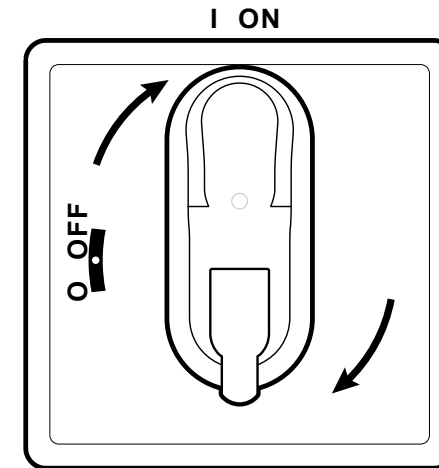

2. Turn the disconnecter handle to ON: the controller runs the lamp test and switches on.

Configure the controller

When powered up, the controller is configured with the values of the parameters set in AP1, see “Applications” on page 15. Configure the controller as follows:






If	Then
The actual application corresponds to the application AP1.	Check the values of all parameters and, if necessary, edit the parameters, see “Modifying the parameters” on page 31.
The actual application corresponds to application AP2 or AP3 or AP4.	Load the correct application, see “Loading a default application” on page 26. Check the values of all parameters and, if necessary, edit the parameters, see “Modifying the parameters” on page 31
The actual application does not correspond to a default application.	Set the parameters as required, see “Modifying the parameters” on page 31.

Check the correct operation of the panel

Run a complete refrigeration cycle and check the correct operation of the IDPanel 978 and the correct regulation of the controlled refrigerated unit.

Installer procedure

Loading a default application

1. Hold down button  and at the same time turn the disconnecter handle to ON: “AP1” appears on the display.
2. Scroll through the applications using buttons  and .
3. To select the required application press ; to cancel the operation press : if the operation was successful, the letter “y” appears, otherwise “n” appears.
4. Wait for a few seconds: the main screen appears.

Setting communication with a supervisor

It is possible to make the IDPanel 978 communicate with a supervisor, the procedure is described below:

1. Connect the cable supplied with the BusAdapter 150 to the TTL port on the controller.
2. Set the parameters, as follows:

If	Then
If you wish to communicate with Televis System	In the Add folder, set the parameters dEA , FAA .
If you wish to communicate with a supervisor via Modbus protocol	In the Add folder, set the parameters dEA , FAA , Pty and Stp .

3. Connect the cable to the Bus**Adapter** 150.





Changing the password

There are two levels of password:











- Password “PA1”: allows access to user parameters. By default the password is disabled (parameter **PS1**=0).
- Password “PA2”: allows access to installer parameters. By default the password is enabled (parameter **PS2**=15).

The procedure for changing the two passwords is described below.




Enable password “PA1”

1. Hold down the **SET** button.
2. Scroll through the parameters with buttons  and  to view parameter **PS1** and press the **SET** button.
3. Change the value with buttons  and .
4. To confirm the value, press the **SET** key.
5. To validate the new setting, switch the controller off and back on again.




Changing the password “PA2”

1. Hold down the **SET** button.
2. Scroll through the parameters with buttons  and  to view parameter **PA2** and press the **SET** button.
3. Set the value “15” with buttons  and  and press the **SET** button.
4. Scroll through the folders with buttons  and  to view the **diS** folder and press the **SET** button.
5. Scroll through the parameters with buttons  and  to view parameter **PS2** and press the **SET** button.
6. Change the value with buttons  and .
7. To confirm the value, press the **SET** key.
8. To validate the new setting, switch the controller off and back on again.

Lock/unlock the controller pushbutton panel

The controller pushbutton panel can be locked. If the lock is on, the secondary functions (long press) of buttons ,  and  are disabled and the setpoint value cannot be modified. It is in any case possible to enter the “Programming” menu and modify the parameters.

From the “Machine Status” menu

1. Press the  button: you will enter the “Machine Status” menu
2. Within two seconds, press buttons  and  at the same time.

Note: the procedure is the same for both locking and unlocking the pushbutton panel.

From the “Programming” menu



To lock the pushbutton panel, set the parameter **LOC**, in the folder **diS** = y; to unlock **diS** = n.

Use of the equipment







Operator procedures

Modifying the controller state

The actions to change the controller state are described below:

- To switch on: turn the disconnect handle to ON
- To switch off: turn the disconnect handle to OFF
- To place in standby: hold down the  button
- To re-enable after standby: hold down the  button





Setting the Set point

1. To enter the “Machine Status” menu, press the  button.
2. Scroll through the folders using buttons  and  to display the folder **SEt** and press the  button: the current setpoint value is shown.
3. To modify the value, within 15 seconds press buttons  and .

Note: if “LOC” appears on the display the setpoint can only be viewed but not modified.


4. To confirm the value, press the  key.

Displaying the probes

1. To enter the “Machine Status” menu, press the  button.
2. Scroll through the folders using buttons  and  to view the folder **Pb1**, **Pb2** or **Pb3** and press the  button: the value measured by the associated probe appears.


Managing alarms

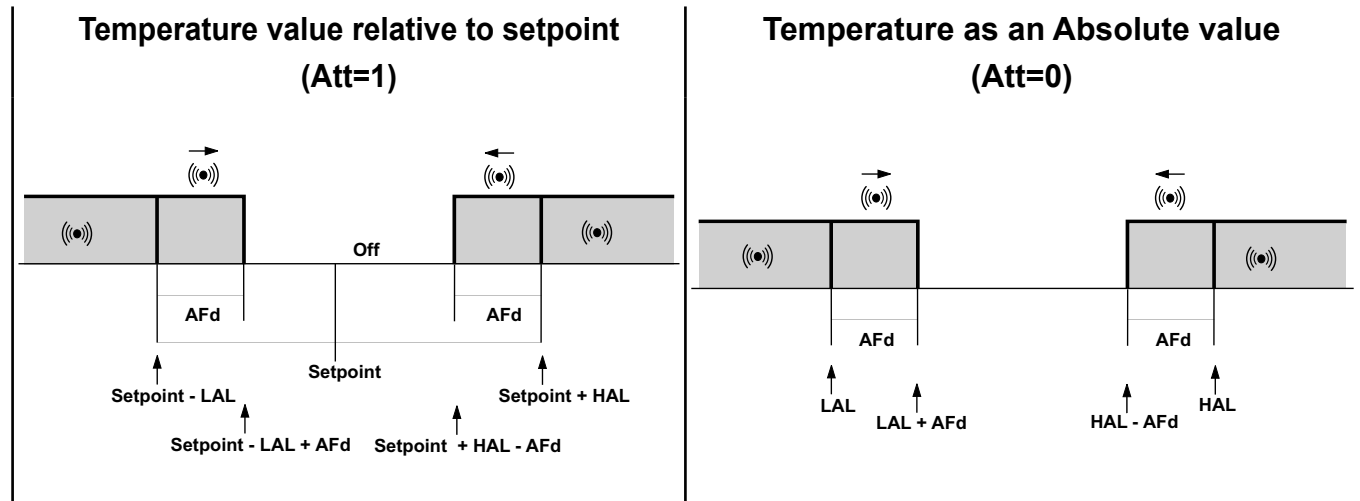


Consider the following diagram to set the parameters managing the temperature out of tolerance warnings:








Minimum temperature alarm	Temp. \leq Set + LAL *	Temp. \leq LAL (LAL with sign)
Maximum temperature alarm	Temp. \geq Set + HAL **	Temp. \geq HAL (HAL with sign)
Reset from minimum temperature alarm condition	Temp. \geq Set + LAL + AFd or \geq Set - LAL + AFd (LAL < 0)	Temp. \geq LAL + AFd
Reset from maximum temperature alarm condition	Temp. \leq Set + HAL - AFd (HAL > 0)	Temp. \leq HAL - AFd
	* If LAL is negative, Set + LAL < Set ** If HAL is negative, Set + HAL < Set	


Modifying the parameters

1. To enter the “Programming” menu hold down the  button:


If	Then
If the user password is disabled (PS1 = 0)	<p>Entering the “Programming” menu, the first user parameter appears directly.</p> <p>To modify user parameters, proceed with step 2.</p> <p>To access the installer parameters, scroll through the parameters until PA2 appears and press the  button.</p> <p>If requested, enter the password.</p> <p>Note: if the entered password is wrong, “PA2” will appear again and the password must be entered again.</p>
If the user password is enabled (PS1 ≠ 0)	<p>Entering the “Programming” menu, “PA1” and “PA2” alternate on the display.</p> <p>To access the user parameters, select PA1 with  and enter the password</p> <p>To access the installer parameters, select PA2 with  and enter the password</p> <p>Note: if the entered password is wrong, “PA1” or “PA2” will appear again and the password must be entered again.</p>

2. Scroll through the parameters using buttons  and .
3. Display the required parameter and press the  button.
4. Change the value with buttons  and .

Note: if “LOC” appears on the display, the setpoint can only be viewed but not modified.

5. To confirm the value, press the  key.
6. To validate the new setting, switch the controller off and back on again.

Manually enabling the defrosting cycle

Hold down the  button: if the temperature conditions are correct, the defrost cycle will start; otherwise, the display flashes three times and the defrost cycle is interrupted.

Maintenance

Maintenance warnings

General warnings

DANGER

RISK OF ELECTRIC SHOCK, EXPLOSION OR ELECTRIC ARC

- Any maintenance on the panel must only be performed by persons who are able to work in safety
- Turn off all devices, including connected devices, before removing any covers or doors, or installing/uninstalling accessories, hardware, cables, or wires.
- To check that the system is powered down, always use a voltmeter properly calibrated to the nominal voltage value.
- Before restarting the unit, replace and secure all covers, hardware accessories, cables, and check for a good ground connection.
- Use this equipment and all connected products only at the specified voltage.
- Comply with all the standards regarding accident protection and the local applicable safety directives.

Failure to follow these instructions will result in death or serious injury.

Power supply isolation

To prevent the power from being accidentally switched back on when replacing components inside or outside the panel and during maintenance, the person responsible for the operations must proceed as follows:

- Turn the disconnect handle to OFF.
- If the works involve components outside the panel, place a padlock in the hole on the disconnect handle and place the key in a safe place.
- Place a “Maintenance in progress” warning sign.

DANGER

RISK OF ELECTRIC SHOCK, EXPLOSION OR ELECTRIC ARC

Do not remove or tamper with the padlock. Do not switch the power back on without authorisation.

Failure to follow these instructions will result in death or serious injury.

Controller maintenance

Replacing the controller

Foreword

To adapt a new standard IDPlus 978 to work in the IDPanel 978, pay particular attention to the configuration of the digital outputs.


NOTICE

INOPERABLE DEVICE


Note down the configuration of parameters **H21, H22, H23 and H24** in the controller to be replaced.

Failure to follow these instructions can result in equipment damage.


Procedure

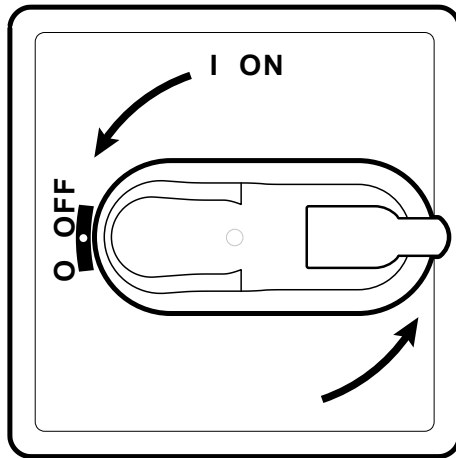


1. Turn the disconnecter handle to OFF.

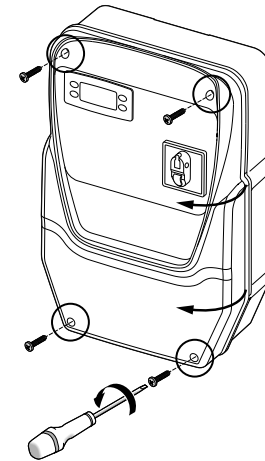


2. Remove the screws and open the panel cover.

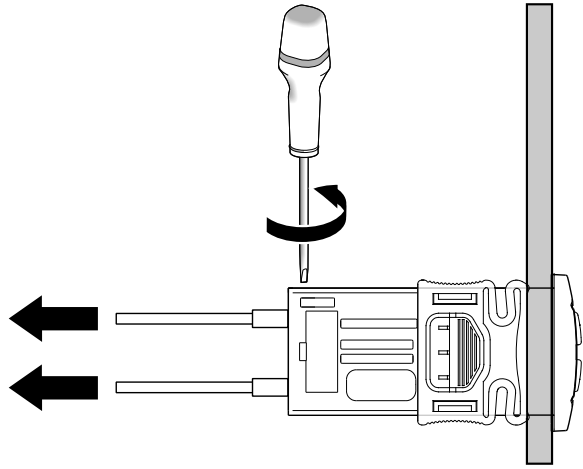


3. Remove the cables from the controller terminals. Pay attention to the original position of each cable.

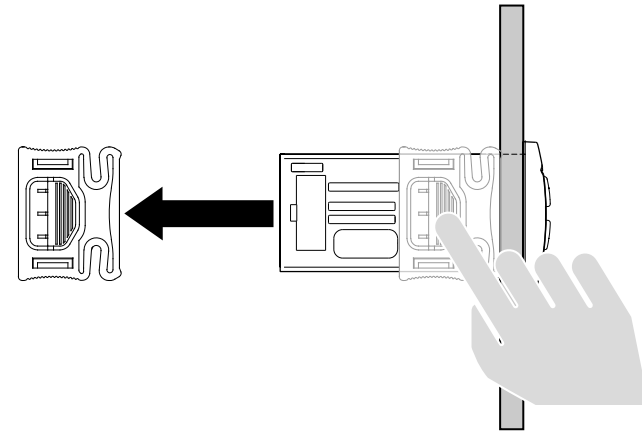


4. Remove the brackets.

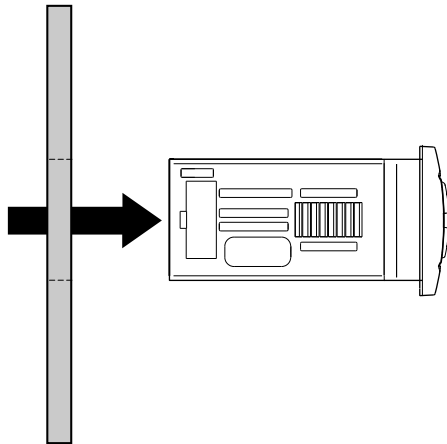


5. Remove the controller from the front of the panel.

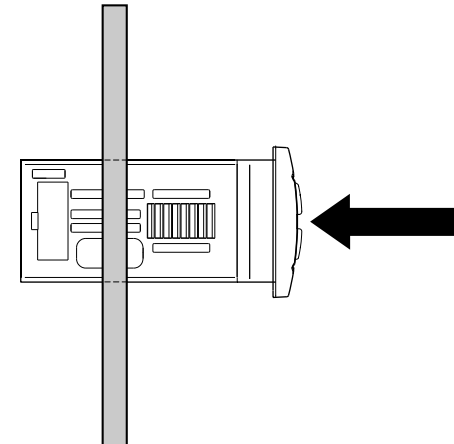


6. Fit the new controller in place of the one removed.

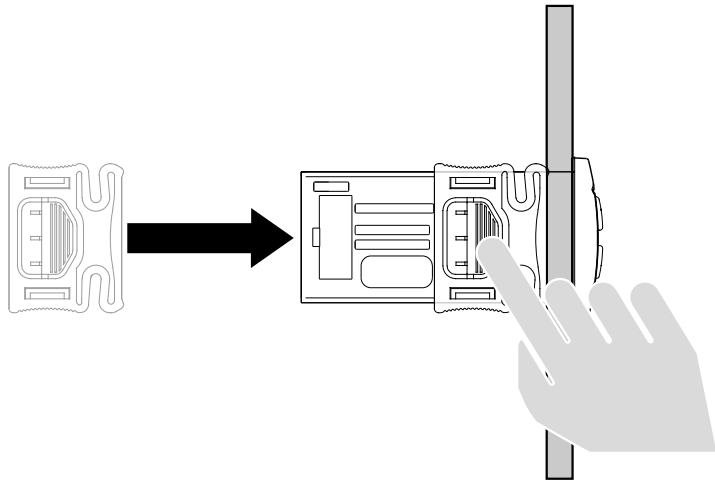


7. Fix the controller with the brackets.

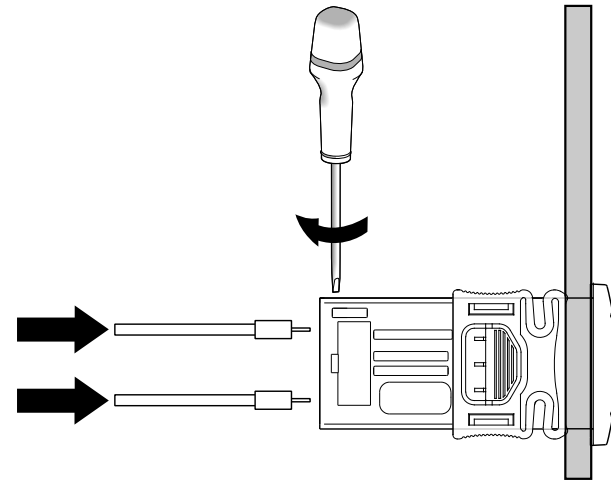

8. Reconnect the cables to the terminals.

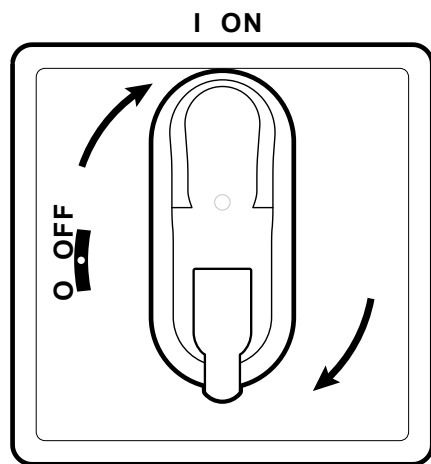



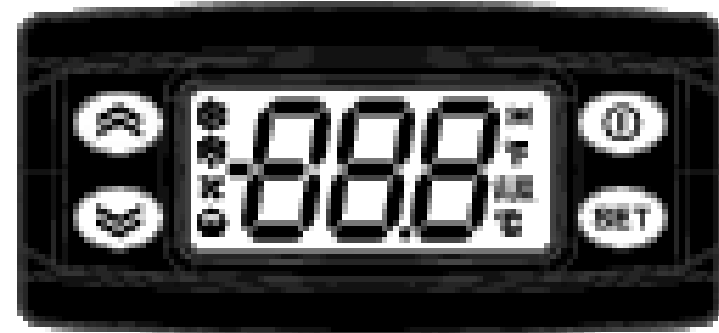



9. Turn the disconnecter handle to ON: the controller runs the lamp test and switches on.



10. Correctly configure the controller, see “Controller maintenance” on page 33 .
11. To validate the new configuration, switch the controller off and back on again.

Using the Copy Card


The Copy Card is used to quickly set the parameters and is connected to the serial port (TTL).

1. Access the installer parameters, see step 1 in the procedure “Modifying the parameters” on page 31.
2. Scroll through the folders with buttons  and  to view the **FPr** folder and press the  button.
3. Scroll through the parameters with buttons  and  to view the required parameter and press the  button.

Operations with the Copy Card

- To format the card (recommended on first use) view parameter **Fr** and press the  button.

NOTE. The **Fr** parameter deletes all data present and this operation cannot be reversed.

- To load the configuration parameters from the controller to the card, view parameter **UL** and press the  button.
- To download the configuration parameters from the card to the controller, connect the card to the controller with the controller switched off. When switching the controller on, the data in the card will be automatically downloaded to the controller. At the end of the lamp test, the display will show “dLy” if the operation was successful and “dLn” if not.

Note: after the Download, the controller will use the newly uploaded map settings.

Resetting the default values

In the event of a malfunction or in case of need, the default values in the parameter map can be reloaded.

NOTICE

INOPERABLE DEVICE

This operation resets the controller to its initial state, returning all parameters to their default values. This means that all changes that may have been made to operating parameters will be lost.

Failure to follow these instructions can result in equipment damage.

1. Hold down button **SET** and at the same time turn the disconnect handle to ON: “AP1” appears on the display.
2. Select AP1 with the **SET** button; to cancel the operation press **⓪**: if the operation was successful, the letter “y” appears, otherwise “n” appears.
3. Wait for a few seconds: the main display screen appears.

Routine maintenance

Operations

After the first 20 days of operation and subsequently once a year:

Operation	Component
Tightening	Disconnect terminals (QS1)
	Thermal relay terminals (RTC1)

Cleaning

Do not use abrasive products or solvents.

Diagnostics

Alarms

Introduction

An alarm condition is always shown with the  icon, the buzzer and a relay (if configured).



Note: if alarm exclusion times have been set (see **AL** folder in the installer parameters) the alarm will not be indicated.





Alarm operations




To silence the buzzer, press any key: the relative icon will continue to flash.


To delete the folders **HC n**, **tC n**, **bC n** and **bt n** in the folder **AL**, launch the **rES** function in folder **FnC**.

Alarm key

Label	Description	Cause	Effects	Troubleshooting
E1	Probe 1 (Pb1) in error (ambient)	<ul style="list-style-type: none">Measured values are outside operating rangeProbe error/short-circuited/open	<ul style="list-style-type: none">Label E1 displayedIcon  permanently onRelay on (if configured)Max/min alarm regulator disabledCompressor operation based on parameters Ont and "Oft"	<ul style="list-style-type: none">Check the probe type (parameter H00)Check the probe wiringReplace probe
E2	Probe 2 (Pb2) in error (defrost)	<ul style="list-style-type: none">Measured values are outside operating rangeProbe faulty/short-circuited/open	<ul style="list-style-type: none">Label E2 displayedIcon  permanently onRelay on (if configured)The defrost cycle will end due to time-out (parameter dEt)The evaporator fans will be: ON if the compressor is ON and based on parameter FCO if the compressor is OFF.	<ul style="list-style-type: none">Check the probe type (parameter H00)Check the probe wiringReplace probe

Label	Description	Cause	Effects	Troubleshooting
E3	Probe 3 (Pb3) in error	<ul style="list-style-type: none"> Measured values are outside operating range Probe error/short-circuited/open 	<ul style="list-style-type: none"> Label E3 displayed Icon  permanently on Relay on (if configured) 	<ul style="list-style-type: none"> Check the probe type (parameter H00) Check the probe wiring Replace probe
AH1	Pb1 HIGH temperature alarm	Value read by probe Pb1 > HAL after time of tAO. (see Alarms Management)	<ul style="list-style-type: none"> Recording of label AH1 in folder AL Relay on (if configured) No effect on regulation. 	Wait for temperature value read by Pb1 to return below HAL
AL1	Pb1 LOW temperature alarm	Value read by Pb1 < LAL after time of tAO. (see Alarms Management)	<ul style="list-style-type: none"> Recording of label AL1 in folder AL Relay on (if configured) No effect on regulation. 	Wait for temperature value read by Pb1 to return above LAL
EA	External alarm	Digital input activated (H11 = ±5)	<ul style="list-style-type: none"> Recording of label EA in folder AL Icon  permanently on Relay on (if configured) Regulation blocked if rLO = y 	Check and remove the external cause which triggered the alarm on the digital input.
OPd	Door open alarm	Activation of digital input (H11 = ±4) for a time greater than tdO	<ul style="list-style-type: none"> Recording of label OPd in folder AL Icon  permanently on Relay on (if configured) Regulator blocked 	<ul style="list-style-type: none"> Close the door Delay function defined by OAO
Ad2	Defrost due to timeout	End of defrost cycle due to timeout rather than due to defrosting end temperature being read by Pb2.	<ul style="list-style-type: none"> Recording of label Ad2 in folder AL Icon  permanently on Relay on (if configured) 	Await next defrost cycle for automatic return to normal

Label	Description	Cause	Effects	Troubleshooting
COH	Overheating alarm	Pb3 exceeded the value set by parameter SA3 .	<ul style="list-style-type: none"> Recording of label COH in folder AL Icon  permanently on Relay on (if configured) Regulation locked (compressor) 	Wait for the temperature to return to a value of SA3 (setpoint) minus dA3 (differential)
nPA	General pressure alarm	Activation of pressure switch alarm by general pressure switch.	<p>If the number of pressure switch activations is $n < PEn$:</p> <ul style="list-style-type: none"> Recording of folder nPA in folder AL with the number of pressure switch activations Regulation inhibited (compressor and fans) 	Check and remove the cause of the alarm on the digital input (Automatic Reset)
PAL	General pressure alarm	Activation of pressure switch alarm by general pressure switch.	<p>If the number of pressure switch activations is $n = PEn$:</p> <ul style="list-style-type: none"> Label PAL displayed Recording of label PA in folder AL Icon  permanently on Relay on (if configured) Regulation inhibited (compressor and fans) 	<ul style="list-style-type: none"> Switch the device off and back on again Reset alarms by entering the functions folder and selecting the rAP (Manual Reset)
HC n	Max/Min value of Pb3 when out of range (SLH...SHH)	<p>Stores the Max/Min value read by Pb3 when it exceeds the range SLH...SHH.</p> <p>“n” represents the sequential number of times the range is exceeded.</p>	<ul style="list-style-type: none"> Recording of folder HC n in folder AL Icon  permanently on Relay on (if configured) No effect on regulation. 	Note: “n” can assume the values 1 to 8. If $n > 8$, folder HC8 will blink and the system will overwrite the folders starting from $n=1$.

Label	Description	Cause	Effects	Troubleshooting
tC n	Pb3 Dwell Time out of range (SLH...SHH)	Stores the time for which the Pb3 value remains outside of the range SLH...SHH. “n” represents the sequential number of times the range is exceeded.	<ul style="list-style-type: none"> Recording of folder tC n in folder AL Icon  permanently on Relay on (if configured) No effect on regulation. 	Note: “n” can assume the values 1 to 8. If n > 8, folder tC8 will blink and the system will overwrite the folders starting from n=1.
bC n	Value read by Pb3 on return from bOt	Stores the value read by Pb3 on return from a blackout. “n” represents the sequential number of blackouts that have occurred.	<ul style="list-style-type: none"> Recording of folder bC n in folder AL No effect on regulation. 	Note: “n” can assume the values 1 to 8. If n > 8, folder bC8 will blink and the system will overwrite the folders starting from n=1.
bt n	Pb3 out-of-range dwell time during bOt	Stores the time for which the Pb3 value remains out of range during a blackout. “n” represents the sequential number of blackouts that have occurred.	<ul style="list-style-type: none"> Recording of folder bt n in folder AL. The value contained will be 0 if the value of Pb3 has remained within the range, ≠ 0 if the value has gone outside of the range. No effect on regulation. 	Note: “n” can assume the values 1 to 8. If n > 8, folder bt8 will blink and the system will overwrite the folders starting from n=1.

Troubleshooting

List of possible problems

Problem	Possible causes	Solution
The compressor starts with a manual command but not a controller command	Panel not powered up.	<ul style="list-style-type: none">• Check that the disconnecter is in the ON position.• Check the disconnecter connections.• Check the distribution line.
The controlled utilities do not behave as expected	Incorrect wiring to the main terminal board	Check the wiring, referring to the data given in “Electrical connections” on page 47.
	Parameters set incorrectly.	Modify the value of the parameters, see “Modifying the parameters” on page 31.
The temperature value read by the probe is not real	Probe type set incorrectly.	Set the correct probe type (parameter H00)

Assistance

How to ask for assistance

Customer Technical Support

+39 0437 986 300

techsuppeliwell@schneider-electric.com

Sales

+39 0437 986 100 (Italy)


+39 0437 986 200 (Other countries)

saleseliwell@schneider-electric.com

How to return the equipment

In the event of a failure or malfunction which requires the equipment to be returned, return it in its original packaging to the local distributor.

Note the distributor data here:



Technical data

Technical specifications

General specifications

	Single-phase versions	Three-phase versions
Power supply	230 V ac (F + N + PE), 50/60 Hz	400 V ac (3F + N + T), 50/60 Hz
Command type	Single-phase	Three-phase
Disconnecter	25 A	
Control	IDPlus 978 electronic controller	
Connectivity	TTL port for connection to Televis System /Modbus supervisor	
Controller protection	1 fuse, 5 x 20 mm (0.20 x 0.8 in) 160 mA, T	
General protection	2 fuses, 10 x 38 mm (0.40 x 1.5 in), 25 A, T. See “Single-phase version annexes” on page 61.	3 fuses (1), 10 x 38 mm (0.40 x 1.5 in), 25 A, T. See “Three-phase version annexes” on page 66.
	(1) NOTE: pay attention to the fuses insertion in the three-phase version: the fuse holder is provided with dual slot for spare fuses. The correct position is the lower one.	
Motor protection	See “Single-phase version annexes” on page 61.	See “Three-phase version annexes” on page 66.
Enclosure rating	IP54	
Over voltage category	II (IEC 60664-1: 2007).	
Pollution class	2 (IEC 60664-1: 2007).	
Location type	Indoor	
Installation method	Stationary	
Max Altitude installation site	2000 m	

Electrical specifications

	Single-phase versions	Three-phase versions
Rated voltage (U_n)	230 V ac	400 V ac
Rated operating voltage (U_o)	230 V ac	400 V ac
Rated insulation voltage (U_i)	230 V ac	400 V ac
Rated panel current (I_{nA})	15A 18A	5,5A per phase + 7A on single phase 6A per phase + 7A on single phase
Rated circuit current (I_{nC})	15A 18A	5,5A per phase + 7A on single phase 6A per phase + 7A on single phase
Rated short-time withstand current (I_{cw})	19A 24A	15A 19A
Rated peak withstand current (I_{pk})	20A 25A	16A 20A
Conditioned short circuit current (I_{cc})	< 5 kA	<5 kA
Rated frequency (f_n)	50/60 Hz	50/60 Hz

Inputs and outputs (see “Electrical connections” on page 55)

Probe input	2 + 1 (in place of a digital input)
Digital inputs	1 (in place of a probe input) + 1 (if no communication with supervisor via the TTL port)
Digital outputs	4 relays

Probe values

Note: data relating only to the IDPanel 978 without considering the probes (accessories not supplied). The error introduced by the probe must be added to the values given here.

Display range	3 figures + sign NTC: -50.0...110 °C (-58...230 °F) PTC: -55.0...140 °C (-67...284 °F) Pt1000: -55.0...150 °C (-67...302 °F)
Accuracy	NTC/PTC/Pt1000 (-55.0...70 °C/-67...158 °F): 0.5% better than the integral scale + 1dgt Pt1000 (70...150 °C/158...302 °F): 0.6% better than the integral scale + 1dgt
Resolution	0.1 °C (1 °F)

Mechanical characteristics

	Single-phase versions	Three-phase versions
Material	PC + ABS	
Installation	On wall	
Size (L x H x P)	213 x 318 x 102 mm (8.4 x 12.5 x 4 in)	
Weight	3 kg (6.6 lb)	


Ambient conditions of use

Temperature	-5...+40 °C (-58...+104 °F)	according to IEC 61439-2, for indoor use
Humidity	10...90% without condensation	

Ambient storage conditions

Temperature	-25...+70 °C (-13...+158 °F)
Humidity	10...90% without condensation

Standards and directives

Directives	2014/35/EU (Low voltage) 2014/30/EU (Electro-magnetic compatibility)
Standards	EN 60204-1 EN 61439-1
Marking	

Electrical connections

  **DANGER**

RISK OF ELECTRIC SHOCK, EXPLOSION OR ELECTRIC ARC

The electrical connections must only be made by persons who are able to work in safety.

Failure to follow these instructions will result in death or serious injury.

Wiring diagram

NOTICE

INOPERABLE DEVICE


The wiring diagram refers to the factory configuration. If during installation a different configuration is defined, the installer must update the wiring diagram.

Failure to follow these instructions can result in equipment damage.

For single-phase versions, see “Single-phase version wiring diagram” on page 61.

For three-phase versions, see “Three-phase version wiring diagram” on page 66.

Main terminal board


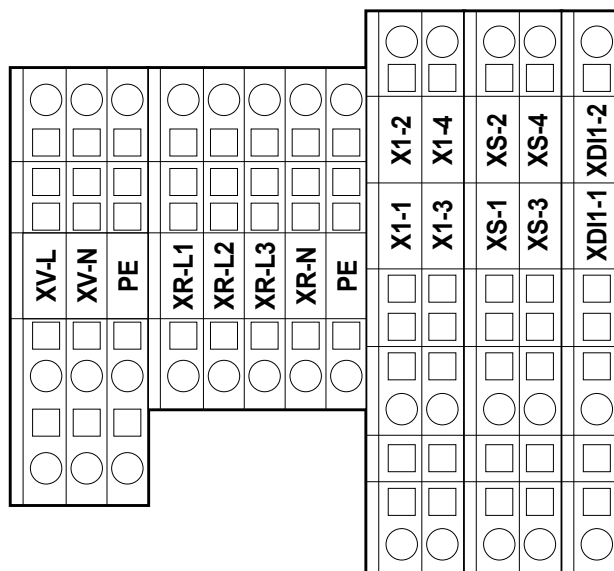


Note: use the **PE** terminals to connect the system to earth.



Terminal	Description	Features	Cables
XV-L	Digital output 1 (Evaporator fans)	250 V ac (1-PH) 10(6) A	Solid wire section: 0.08...4 mm ² Flexible wire section: 0.08...2.5 mm ² (28...14 AWG)
XV-N			
PE			
XR-L1	Digital output 2 (Electrical defrosting element)	Single-phase versions: 800 W Three-phase versions: 1200 W	Solid wire section: 0.08...4 mm ² Flexible wire section: 0.08...2.5 mm ² (28...14 AWG)
XR-L2			
XR-L3			
XR-N			
PE			

Terminal	Description	Features	Cables
X1-1	Digital output 4 (Light)	250 V ac (1-ph) 8(4) A	Solid wire section: 0.08...4 mm ² Flexible wire section: 0.08...4 mm ² (28...12 AWG)
X1-2			
X1-3	Not used	-	-
X1-4			
XS-1	Probe input 1 (Temperature sensor for controlling the compressor)	NTC/PTC/Pt1000, 10 kΩ at 25 °C	Solid wire section: 0.08...4 mm ² Flexible wire section: 0.08...4 mm ² (28...12 AWG)
XS-2			
XS-3	Probe input 2 (Temperature sensor for controlling the defrosting cycle)	NTC/PTC/Pt1000, 10 kΩ at 25 °C, Beta 3435	Solid wire section: 0.08...4 mm ² Flexible wire section: 0.08...4 mm ² (28...12 AWG)
XS-4			
XDI1-1	Digital input 1/Probe input 3 (Door switch)	SELV	Solid wire section: 0.08...4 mm ² Flexible wire section: 0.08...4 mm ² (28...12 AWG)
XDI1-2			


Disconnecter - QS1 (single-phase versions)

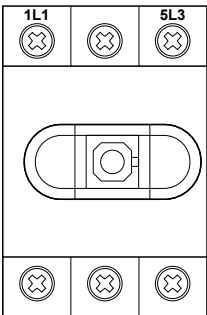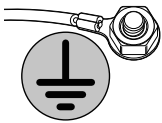	Terminal	Description	Features	Cables	Tightening
	1L1	Stage	See "General characteristics" on page 44	Solid wire section: 0.75 mm ²	1 Nm (8.9 lb-in)
	5L3	Neutral		Flexible wire section: 1.0 mm ² (18..8 AWG)	
			Ground	-	Solid wire section: 0.08...6 mm ² Flexible wire section: 0.08...4 mm ² (28...10 AWG)

Disconnecter - QS1 (three-phase versions)

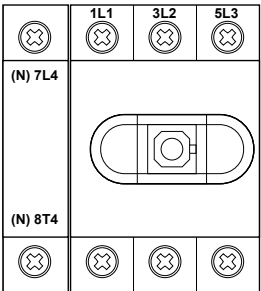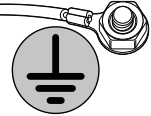	Terminal	Description	Features	Cables	Tightening
	1L1	Time band 1	See "General characteristics" on page 44	Solid wire section: 0.75 mm ²	1 Nm (8.9 lb-in)
	3L2	Time band 2		Flexible wire section: 10 mm ² (18...8 AWG)	
	5L3	Time band 3			
	(N) 7L4	Neutral			
			Ground	-	Solid wire section: 0.08...6 mm ² Flexible wire section: 0.08...4 mm ² (28...10 AWG)

Thermal relay (RTC1)

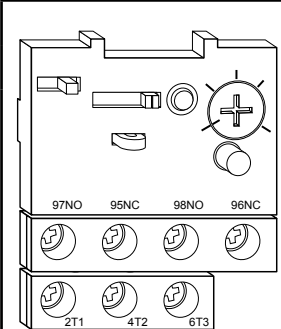	Terminal	Description	Features	Cables	Tightening
	2T1	Digital output 3 (Compressor)	Single-phase versions:	Screw clamp terminals 2 cable(s) 0.34...1.5 mm ² cable stiffness: flexible – with cable end	1.3 Nm (11.5 lb-in)
	4T2		Three-phase versions:	Screw clamp terminals 1 cable(s) 0.34...2.5 mm ² cable stiffness: flexible – with cable end	
	6T3		Screw clamp terminals 2 cable(s) 0.75...4 mm ² cable stiffness: flexible – without cable end		
			Screw clamp terminals 2 cable(s) 0.75...4 mm ² cable stiffness: flexible – without cable end	Screw clamp terminals 1 cable(s) 0.75...4 mm ² cable stiffness: flexible – without cable end	
			Screw clamp terminals 2 cable(s) 1.5...4 mm ² cable stiffness: solid	Screw clamp terminals 1 cable(s) 1.5...4 mm ² cable stiffness: solid	
			Screw clamp terminals 1 cable(s) 1.5...4 mm ² cable stiffness: solid	AWG min 18, AWG max 12	

Controller TTL serial port

TTL


TTL (Molex 5268) for connection to the Copy Card (maximum length = 3 m - 9.8 ft.)

Connection to the supervisor

Use only the cable supplied with the interface module TTL-RS485 BusAdapter 150.

Digital input 2 connection

Use terminals 1 and 2 on the TTL connector: (see figure)

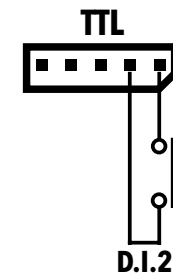

User parameter table

PARA.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.
SEt	Temperature control setpoint	LSE ... HSE	0.0	0.0	0.0	0.0	°C/°F
diF	Compressor relay activation differential	0.1 ... 30.0	2.0	2.0	2.0	2.0	°C/°F
HSE	Maximum value settable for setpoint	LSE ... 302	99.0	99.0	99.0	99.0	°C/°F
LSE	Minimum value settable for setpoint	-58.0 ... HSE	-50.0	-50.0	-50.0	-50.0	°C/°F
dtY	Type of defrost 0 = electrical defrost; 1 = inverse cycle defrost; 2 = defrost independent of compressor.	0/1/2	0	0	1	0	-
dit	Interval between the start of two consecutive defrost cycles	0 ... 250	6	6	6	6	H
dEt	Defrost timeout	1 ... 250	30	30	30	30	min
dSt	Defrost end temperature	-50.0 ... 150	8.0	8.0	8.0	8.0	°C/°F
FSt	Fans disabling temperature	-58.0 ... 302	50.0	50.0	50.0	50.0	°C/°F
Fdt	Fans on delay after a defrost cycle	0 ... 250	2	2	2	2	min
dt	Dripping time	0 ... 250	1	1	1	1	min
dFd	Used to exclude the fans or not (depending on the parameter FCO) n = no (depending on the parameter FCO); y = yes (fan off).	n/y	y	y	y	y	-
HAL	Maximum temperature alarm	LAL ... 150	50.0	50.0	50.0	50.0	°C/°F
LAL	Minimum temperature alarm	-50.0 ... HAL	-50.0	-50.0	-50.0	-50.0	°C/°F
LOC	Basic commands edit lock n = no; y = yes.	n/y	n	n	n	n	-
PS1	Password 1 to access the parameters in the "QUICK" menu	0 ... 250	0	0	0	0	-
CA1	Calibration1. Value to be added to the value read by Pb1	-12.0 ... 12.0	0.0	0.0	0.0	0.0	°C/°F
CA2	Calibration2. Value to be added to the value read by Pb2	-12.0 ... 12.0	0.0	0.0	0.0	0.0	°C/°F
CA3	Calibration3. Value to be added to the value read by Pb3	-12.0 ... 12.0	0.0	0.0		0.0	°C/°F

PARA.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.
ddL	Display mode during defrost 0 = shows the temperature read by Pb1; 1 = locks the reading on the value of Pb1 at the start of defrost; 2 = shows the label “dEF”.	0/1/2	0	0	0	0	-
Ldd	Display lock disabling time-out. 0 = function disabled	0 ... 255	30	30	30	30	min
SHH	Maximum HACCP alarm signals threshold	-55.0 ... 150	50.0	50.0	50.0	50.0	°C/°F
SLH	Minimum HACCP alarm signals threshold	-55.0 ... 150	-50.0	-50.0	-50.0	-50.0	°C/°F
drA	Minimum dwelling time in critical area before alarm	0 ... 99	0	0	0	0	min
drH	HACCP alarm reset time from last reset	0 ... 250	72	72	72	72	H
H50	Enable HACCP and alarm relay functions 0 = HACCP alarms NOT enabled; 1 = HACCP alarms enabled and alarm relay NOT enabled; 2 = HACCP enabled and alarm relay enabled.	0/1/2	0	0	0	0	-
H51	HACCP alarm override time	0 ... 250	0	0	0	0	min
H42	Evaporator probe present	n/y	y	y	y	y	-
H43	Probe 3 present	n/y	n	n	n	n	-
rEL	rELease firmware. Reserved: read-only parameter	/	/	/	/	/	/
tAb	tAble of parameters. Reserved: read-only parameter	/	/	/	/	/	/
PA2	Access to installer parameters	/	/	/	/	/	/

Installer parameter table



PARA.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.
SEt	Temperature control setpoint.	LSE ... HSE	0.0	0.0	0.0	0.0	°C/°F
COMPRESSOR (folder "CP")							
diF	Compressor relay activation differential.	0.1...30.0	2.0	2.0	2.0	2.0	°C/°F
HSE	Maximum value that can be assigned to the setpoint.	LSE...302	99.0	99.0	99.0	99.0	°C/°F
LSE	Minimum value that can be assigned to the setpoint.	-58.0...HSE	-50.0	-50.0	-50.0	-50.0	°C/°F
OSP	Temperature value to be added to the setpoint if reduced set enabled (Economy Function).	-30.0...30.0	3.0	3.0	3.0	3.0	°C/°F
Hc	Regulation method. C = Cold; H = Hot.	C/H	C	C	C	C	-
Ont	Controller switch-on time in the event of faulty probe. If Ont = 1 and OFt = 0 the compressor remains on continuously; if Ont =1 and OFt >0 it operates in duty cycle mode.	0 ... 250	15	15	15	15	min
OFt	Controller switch-off time in the event of faulty probe. If OFt = 1 and Ont = 0 the controller remains off continuously; if OFt = 1 and Ont > 0 it operates in duty cycle mode.	0 ... 250	15	15	15	15	min
dOn	Compressor relay activation delay after request.	0 ... 250	0	0	0	0	s
dOF	Delay after switching off and subsequent switch-on.	0 ... 250	0	0	0	0	min
dbi	Delay between two consecutive compressor switch-ons.	0 ... 250	0	0	0	0	min
Odo	Delay in activating outputs after the controller is switched on or after a power failure. 0 = not active. Note: if this parameter is modified, the controller MUST be switched off and then switched back on to make the modification effective.	0 ... 250	0	0	0	0	min
dCS	"Blast Chilling" setpoint.	-58.0...302	0.0	0.0	0.0	0.0	°C/°F
tdc	"Blast Chilling" duration.	0 ... 255	0	0	0	0	min
dcc	Defrost activation delay after a "Blast Chilling Cycle".	0 ... 255	0	0	0	0	min

PARA.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.
DEFROST (folder "dEF")							
dtY	Type of defrost 0 = electrical defrost; 1 = inverse cycle defrost; 2 = defrost independent of compressor.	0/1/2	0	0	1	0	-
dit	Interval between the start of two consecutive defrost cycles.	0 ... 250	6	6	6	6	H
dCt	Selects the count mode for the defrost interval. 0 = h of compressor operation; 1 = h of equipment operation; 2 = at each compressor stop a defrost cycle is run.	0/1/2	1	1	1	1	-
dOH	Delay preceding start of first defrost after call.	0 ... 59	0	0	0	0	min
dEt	Defrost time-out; determines the maximum defrost duration.	1 ... 250	30	30	30	30	min
dSt	Defrost end temperature - determined by probe Pb2.	-50.0...150	8.0	8.0	8.0	50.0	°C/°F
dPO	Determines whether or not the instrument must defrost at power-up. n = no; y = yes.	n/y	n	n	n	n	-
FANS (folder "FAn")							
FSt	Fans disabling temperature.	-58.0...+302	50.0	50.0	50.0	50.0	°C/°F
FAd	Fan activation differential.	1.0 ... 50.0	2.0	2.0	2.0	2.0	°C/°F
Fdt	Fan activation delay after a defrost cycle.	0 ... 250	2	2	2	2	min
dt	Dripping time.	0 ... 250	1	1	1	1	min
dFd	Allows exclusion of the evaporator fans to be selected or not selected during defrosting. n = no (depending on the parameter FCO); y = yes (fan off).	n/y	y	y	y	y	-
FCO	Selects or deselects fan deactivation at compressor OFF. 0 = fans off; 1 = thermostat-controlled fans; 2 = duty cycle.	0/1/2	0	0	0	0	-
FOn	Time fans remain ON during daytime duty cycle.	0 ... 99	0	0	0	0	min
FOF	Time fans remain OFF during daytime duty cycle	0 ... 99	0	0	0	0	min
Fnn	Time fans remain ON during night-time duty cycle.	0 ... 99	0	0	0	0	min
FnF	Time fans remain OFF during night-time duty cycle.	0 ... 99	0	0	0	0	min

PARA.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.
ESF	"Night" activation mode. n = no; y = yes.	n/y	n	n	n	n	-
ALARMS (folder "AL")							
Att	Can be used to select if parameters HAL and LAL have absolute (Att = 0) or relative value (Att = 1).	0/1	0	0	0	0	-
AFd	Alarm differential.	1.0 ... 50.0	2.0	2.0	2.0	2.0	°C/°F
HAL	Maximum temperature alarm.	LAL...302	50.0	50.0	50.0	50.0	°C/°F
LAL	Minimum temperature alarm.	-58.0...HAL	-50.0	-50.0	-50.0	-50.0	°C/°F
PAO	Alarm exclusion time on switching back on after power failure.	0 ... 10	1	1	1	1	H
dAO	Temperature alarm exclusion time after defrost.	0 ... 999	15	15	15	15	min
OA0	Alarm signalling delay after digital input disabling.	0 ... 10	1	1	1	1	H
tdO	Door open alarm activation delay.	0 ... 250	15	15	15	15	min
tAO	Delay preceding temperature alarm signal.	0 ... 250	0	0	0	0	min
dAt	Alarm signalling end of defrost due to timeout. n = no; y = yes.	n/y	n	n	n	n	-
rLO	An external alarm locks the regulators. n = does not lock; y = locks	n/y	n	n	n	n	-
SA3	Probe 3 alarm Setpoint.	-58.0...302	50.0	50.0	50.0	50.0	°C/°F
dA3	Probe 3 alarm differential.	1.0 ... 50.0	1.0	1.0	1.0	1.0	°C/°F
LIGHTS & DIGITAL INPUTS (folder "Lit")							
dOd	Digital input for switching off utilities. 0 = disabled; 1 = fans disabled; 2 = compressor disabled; 3 = fans and compressor disabled.	0/1/2/3	3	3	3	3	-
dAd	Activation delay for digital input.	0 ... 255	0	0	0	0	min
dCO	Delay in deactivating compressor after door opened.	0 ... 255	1	1	1	1	min

PARA.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.
AuP	AUX relay associated to door switch. n = not associated; y = associated.	n/y	n	n	n	n	-
PRESSURE SWITCH (folder "PrE")							
Pen	Number of errors allowed per generic pressure switch input.	0 ... 15	0	0	0	0	-
PEI	Generic pressure switch error count interval.	1 ... 99	1	1	1	1	min
PEt	Delay in activating compressor after pressure switch deactivation.	0 ... 255	0	0	0	0	min
COMMUNICATION (folder "Add")							
PtS	Selection of communication protocol. t = Televis; d = Modbus.	t/d	t	t	t	t	-
dEA	Index of the device within the family (valid values from 0 to 14).	0 ... 14	0	0	0	0	-
FAA	Device family (valid values from 0 to 14).	0 ... 14	0	0	0	0	-
Pty	Modbus parity bit. n = none; E = even; o = odd.	n/E/o	n	n	n	n	-
StP	Modbus stop bit. 1b = 1 bit; 2b = 2 bit.	1b/2b	1b	1b	1b	1b	-
DISPLAY (folder "diS")							
LOC	Basic commands edit lock. It is still possible to access parameter programming and edit the parameters. n = no; y = yes.	n/y	n	n	n	n	-
PS1	Password1: if PS1≠0 it is the password to the user parameters	0 ... 250	0	0	0	0	-
PS2	Password2: if PS2≠0 is the access key to the installer parameters	0 ... 250	15	15	15	15	-
ndt	Display with decimal point. n = no; y = yes.	n/y	y	y	y	y	-
CA1	Calibration 1. Temperature value to be added to the value of Pb1.	-12.0...12.0	0.0	0.0	0.0	0.0	°C/°F
CA2	Calibration 2. Temperature value to be added to the value of Pb2.	-12.0...12.0	0.0	0.0	0.0	0.0	°C/°F

PARA.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.
CA3	Calibration 3. Temperature value to be added to the value of Pb3.	-12.0...12.0	0.0	0.0	0.0	0.0	°C/°F
ddL	Display mode during defrost. 0 = shows the temperature read by Pb1; 1 = locks the reading on the value of Pb1 at the start of defrost; 2 = shows the label "dEF".	0/1/2	0	0	0	0	-
Ldd	Timeout value for display unlock - label "dEF".	0 ... 255	30	30	30	30	min
dro	Select the unit of measurement used when displaying the temperature recorded by the probes. 0 = °C, 1 = °F. Note: switching between °C and °F DOES NOT modify the SET, diF etc. values. (e.g. setpoint=10°C becomes 10 °F)	0/1	0	0	0	0	-
ddd	Selects the type of value to show in the display. 0 = Setpoint; 1 = probe Pb1; 2 = probe Pb2; 3 = probe Pb3.	0/1/2/3	1	1	1	1	-
HACCP (folder "HCP")							
SHH	Maximum HACCP alarm signals threshold.	-55.0...150	50.0	50.0	50.0	50.0	°C/°F
SLH	Minimum HACCP alarm signals threshold.	-55.0...150	-50.0	-50.0	-50.0	-50.0	°C/°F
drA	Minimum dwelling time in critical area for the event to be recorded. After this time a HACCP alarm will be logged and signalled.	0 ... 99	0	0	0	0	min
drH	HACCP alarm reset time from last reset.	0 ... 250	72	72	72	72	H
H50	Enable HACCP and alarm relay functions. 0 = HACCP alarms NOT enabled; 1 = HACCP alarms enabled and alarm relay NOT enabled; 2 = HACCP enabled and alarm relay enabled.	0/1/2	0	0	0	0	-
H51	HACCP alarm override time.	0 ... 250	0	0	0	0	min
CONFIGURATION (Folder "CnF")							
Note: if at least one parameter in this folder is modified, the controller MUST be switched off and then switched back on to make the modification effective.							
H00	Probe type selection. 0 = PTC; 1 = NTC; 2 = Pt1000.	0/1/2	1	1	1	1	-

PARA.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.
H11	Configuration of digital input 1/polarity. 0 = disabled; ±1 = defrost; ±2 = reduced set; ±3 = AUX; ±4 = door-switch; ±5 = external alarm; ±6 = standby; ±7 = pressure switch; ±8 = deep cooling; ±9 = disable HACCP alarm logging. Note: the “+” sign indicates the input is active when the contact is closed; the “-” sign indicates that the input is active when the contact is opened	-9 ... +9	4	4	4	4	-
H12	Configuration of digital input 2/polarity. Same as H11.	-9 ... +9	0	0	0	0	-
H21	Configurability of digital output 1. 0 = disabled; 1 = compressor; 2 = defrost; 3 = fans; 4 = alarm; 5 = AUX; 6 = standby.	0 ... 6	3	5	5	3	-
H22	Configurability of digital output 2. Same as H21.	0 ... 6	2	2	3	2	-
H23	Configurability of digital output 3. Same as H21.	0 ... 6	1	1	1	1	-
H24	Configurability of digital output 4. 0 = disabled; 1 = compressor; 2 = defrosting; 3 = fans; 4 = alarm; 5 = AUX; 6 = standby; 7 = not used.	0 ... 7	5	3	2	4	-
H25	Enable/disable buzzer. 0 = Disabled; 4 = Enabled; 1-2-3-5-6-7-8 = not used.	0 ... 8	4	4	4	4	-
H31	Key configurability  0 = disabled; 1 = defrosting; 2 = AUX; 3 = reduced set; 4 = standby; 5 = reset HACCP alarms; 6 = HACCP alarms disabled; 7 = deep cooling.	0 ... 7	1	1	1	1	-
H32	Configurability button  . Same as H31.	0 ... 7	2	2	2	0	-
H42	Evaporator probe present. n = not present; y = present.	n/y	y	y	y	y	-
H43	Probe 3 present. n = not present; y = present.	n/y	n	n	n	n	-
rEL	Reserved: read-only parameter. Device version.	/	-	-	-	-	-

PARA.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.
tAb	Reserved: read-only parameter. Table of parameters.	-	-	-	-	-	-
COPY CARD (folder "FPr")							
UL	Transfer of programming parameters from instrument to Copy Card	-	-	-	-	-	-
Fr	Format Copy Card. To erase all data on the Copy Card. Note: if parameter "Fr" is used, the data entered will be permanently lost. This operation cannot be reversed.	-	-	-	-	-	-
Functions (folder "FnC")							
rAP	Reset pressure switch alarms.	-	-	-	-	-	-
rES	Reset HACCP alarms.	-	-	-	-	-	-

Enclosures

Single-phase version annexes


Single-phase version wiring diagram

NOTICE

INOPERABLE DEVICE

The wiring diagram refers to the factory configuration. If during installation a different configuration is defined, the installer must update the wiring diagram.

Failure to follow these instructions can result in equipment damage.

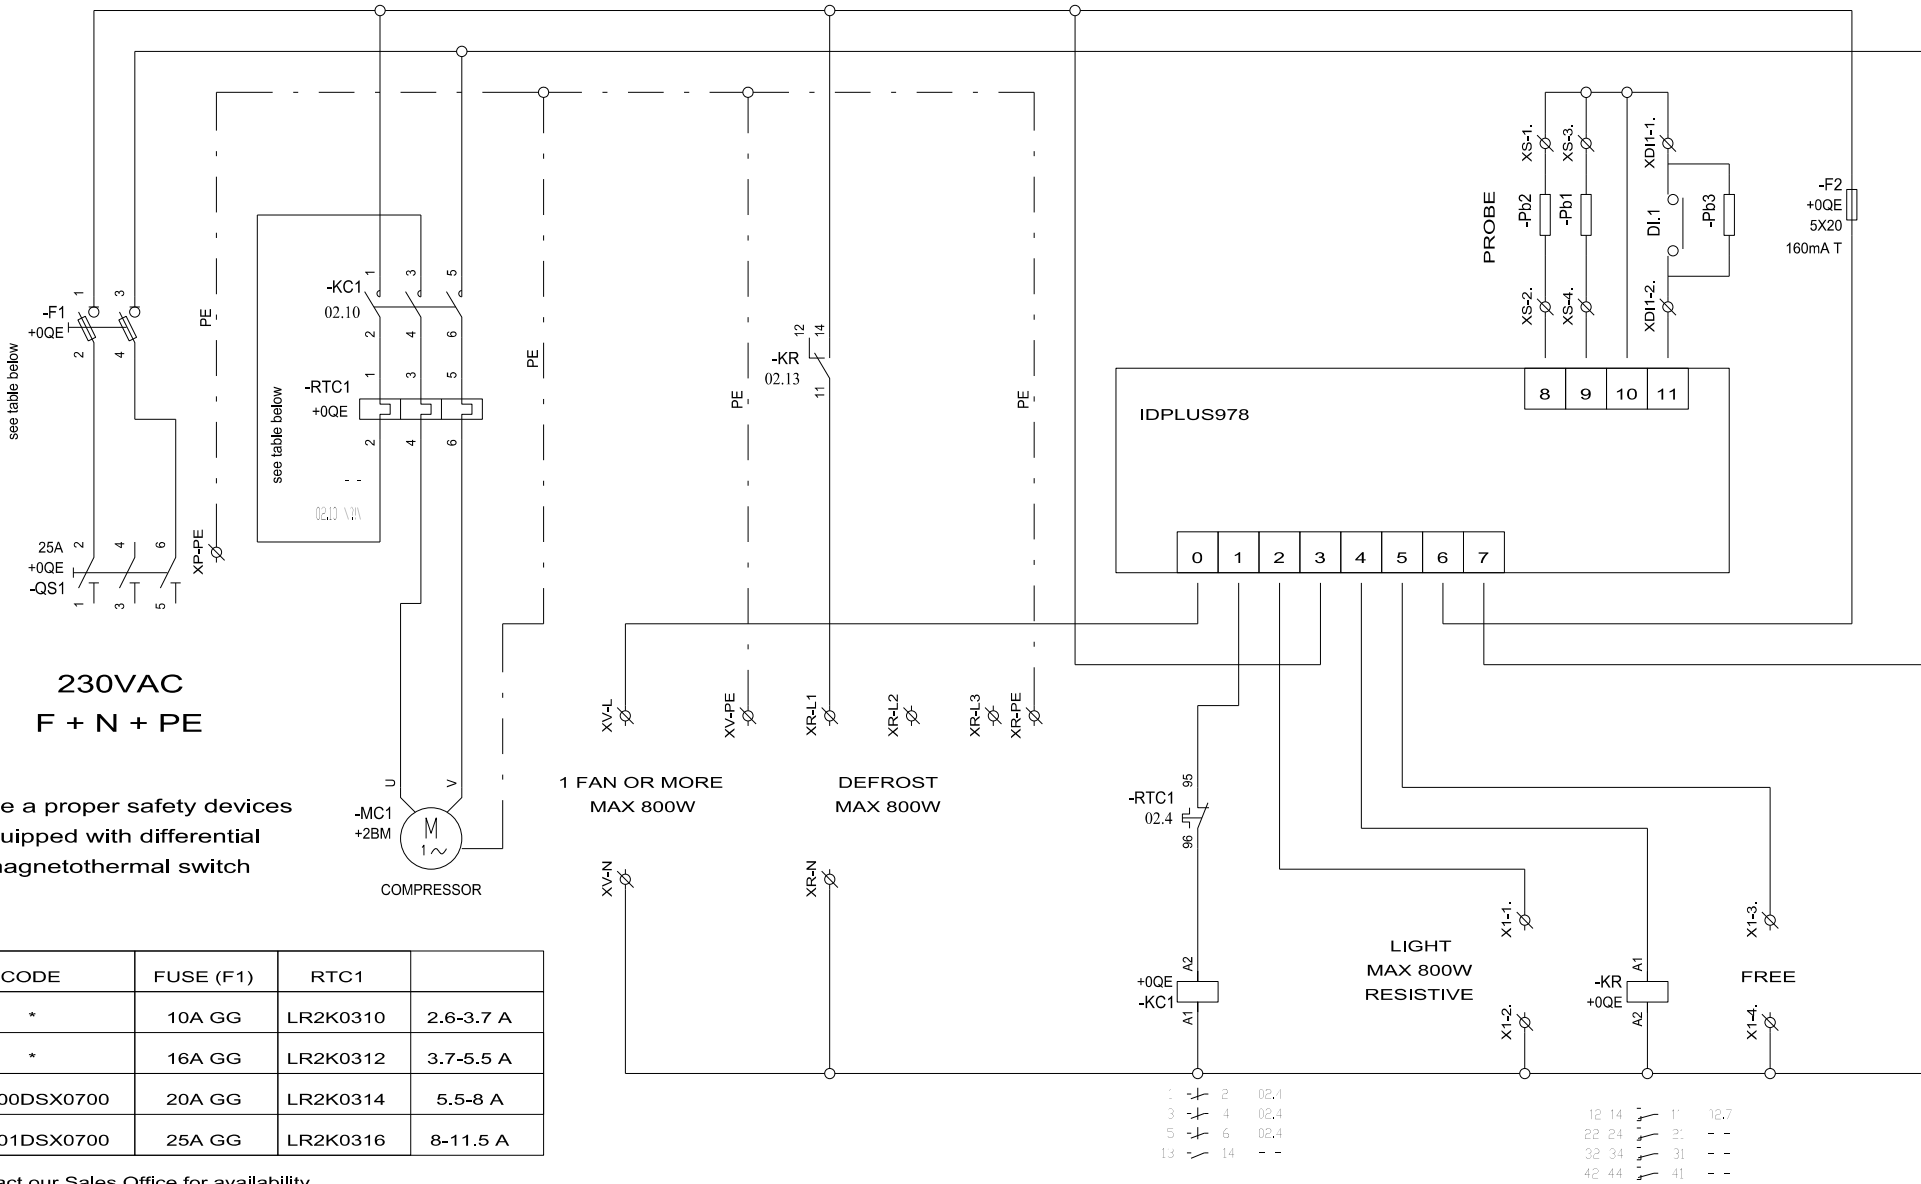


**230VAC
F + N + PE**

Provide a proper safety devices equipped with differential magnetothermal switch

CODE	FUSE (F1)	RTC1	
*	10A GG	LR2K0310	2.6-3.7 A
*	16A GG	LR2K0312	3.7-5.5 A
ELP300DSX0700	20A GG	LR2K0314	5.5-8 A
ELP301DSX0700	25A GG	LR2K0316	8-11.5 A

* Contact our Sales Office for availability

Single-phase version topography

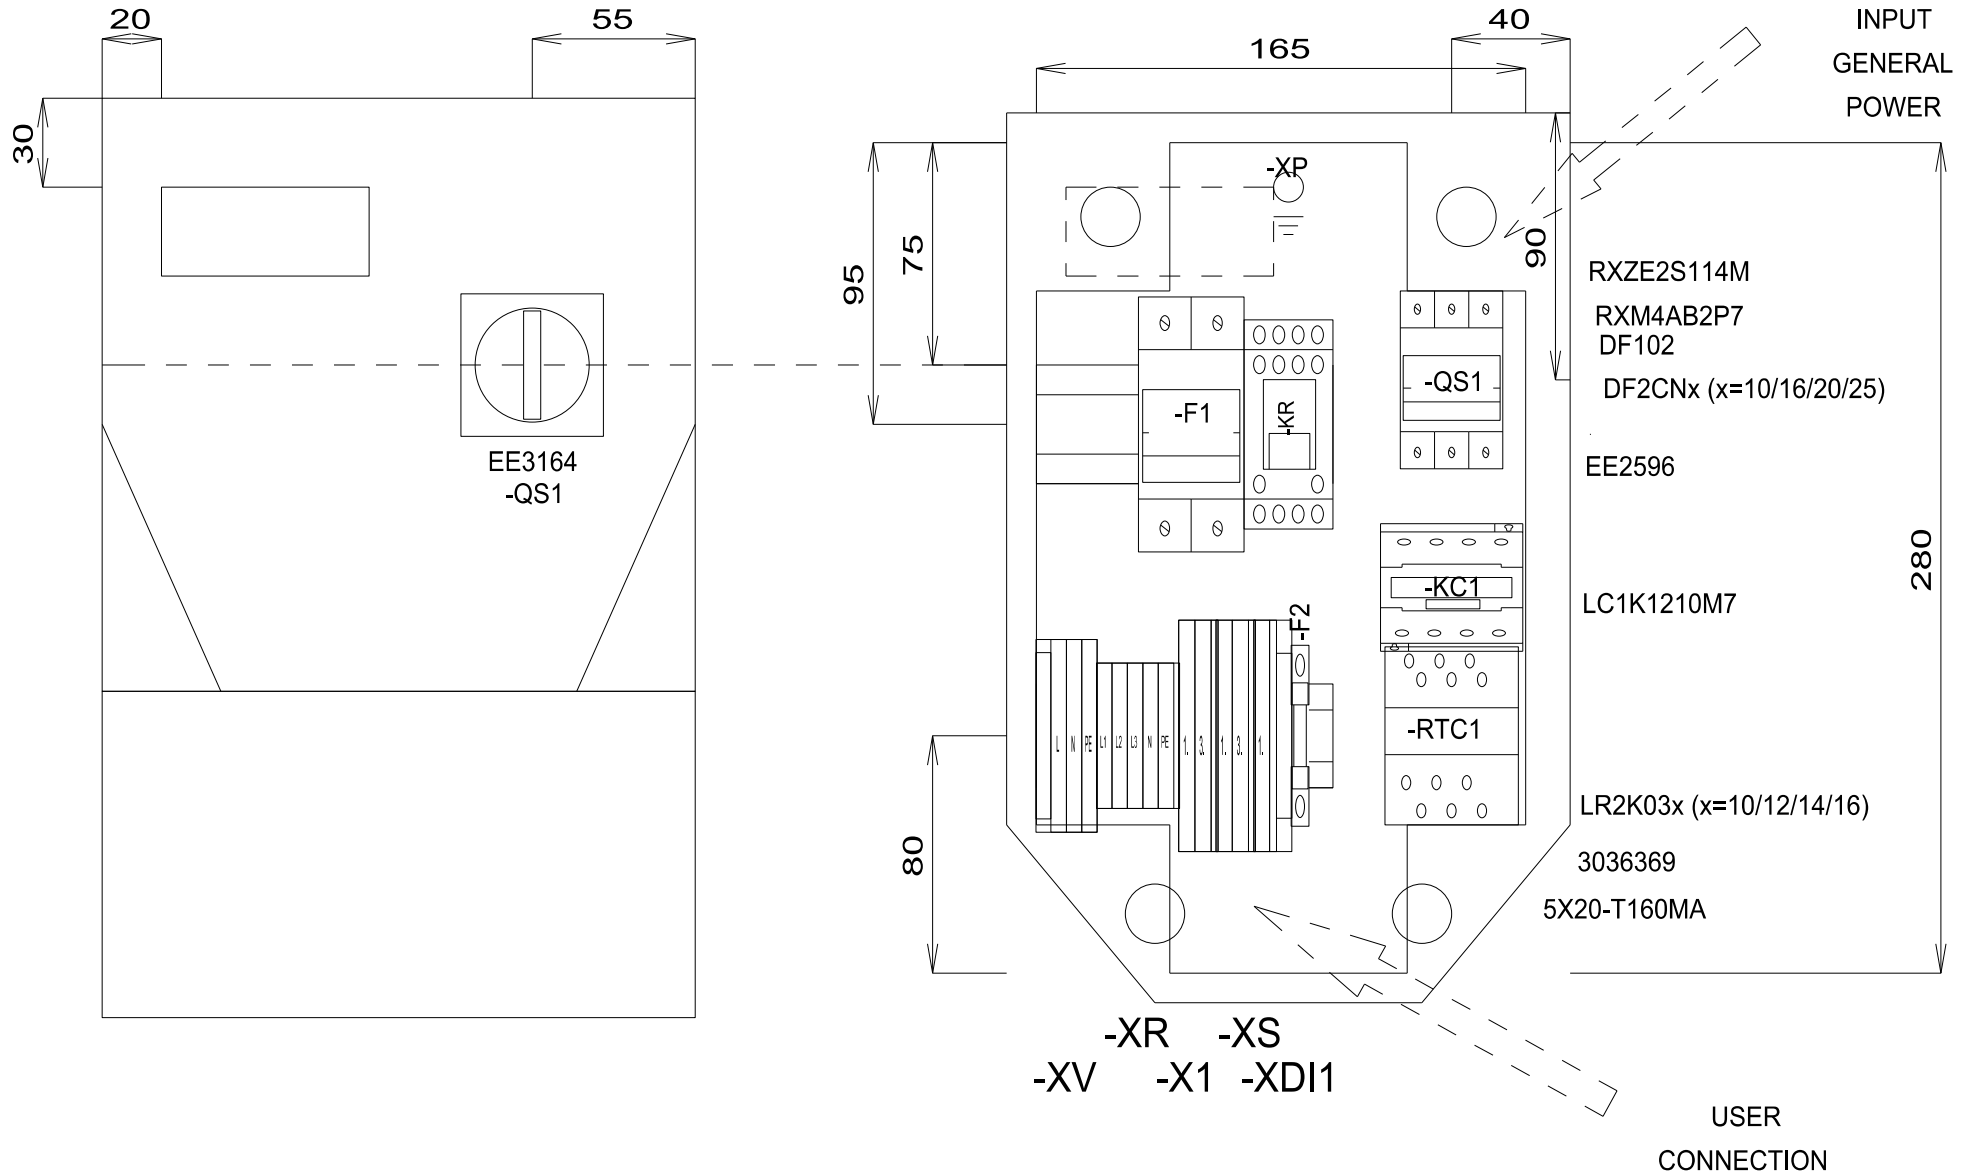

Three-phase version annexes


Three-phase version wiring diagram

NOTICE



INOPERABLE DEVICE

The wiring diagram refers to the factory configuration. If during installation a different configuration is defined, the installer must update the wiring diagram.


Failure to follow these instructions can result in equipment damage.

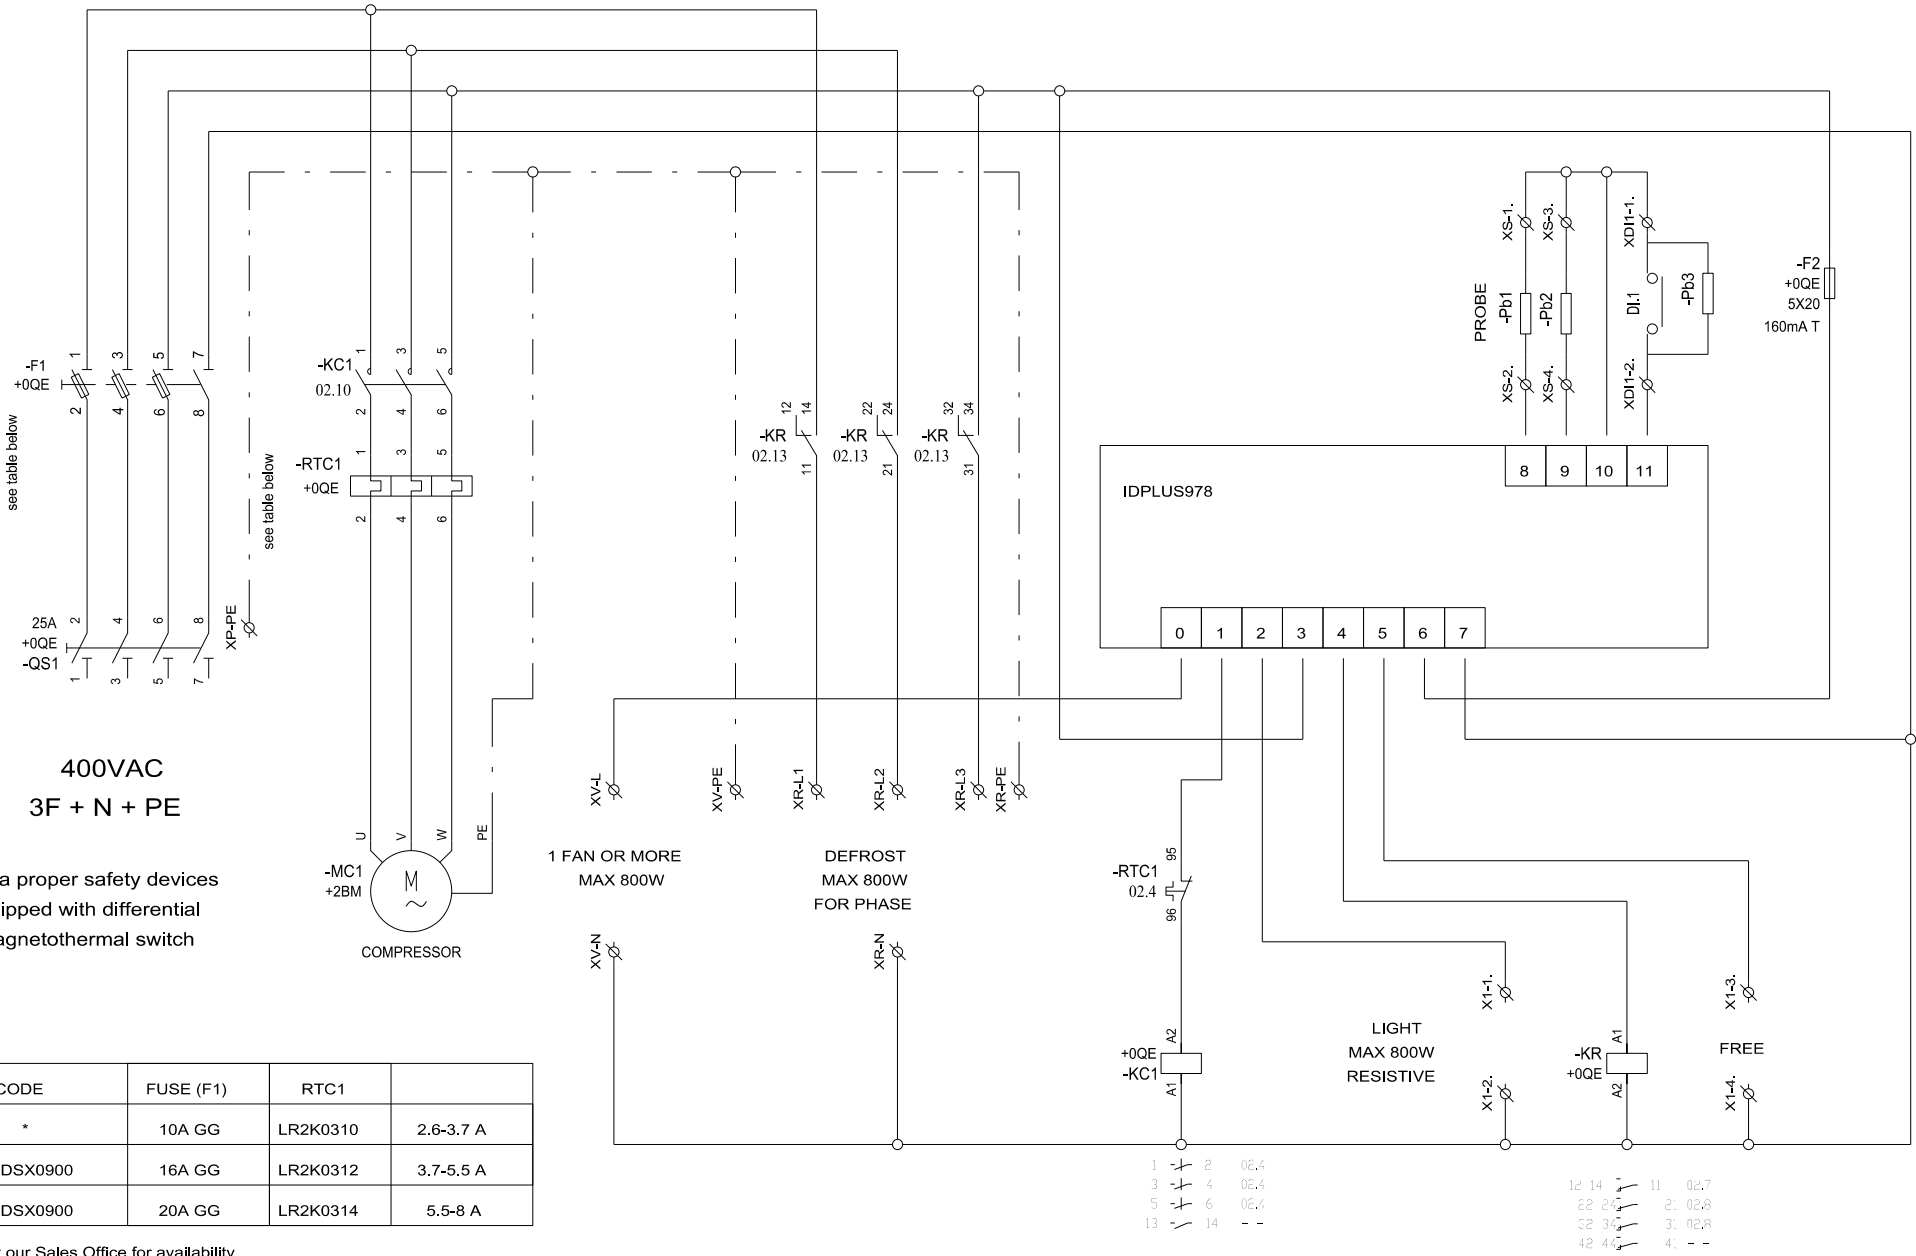

Three-phase version topography

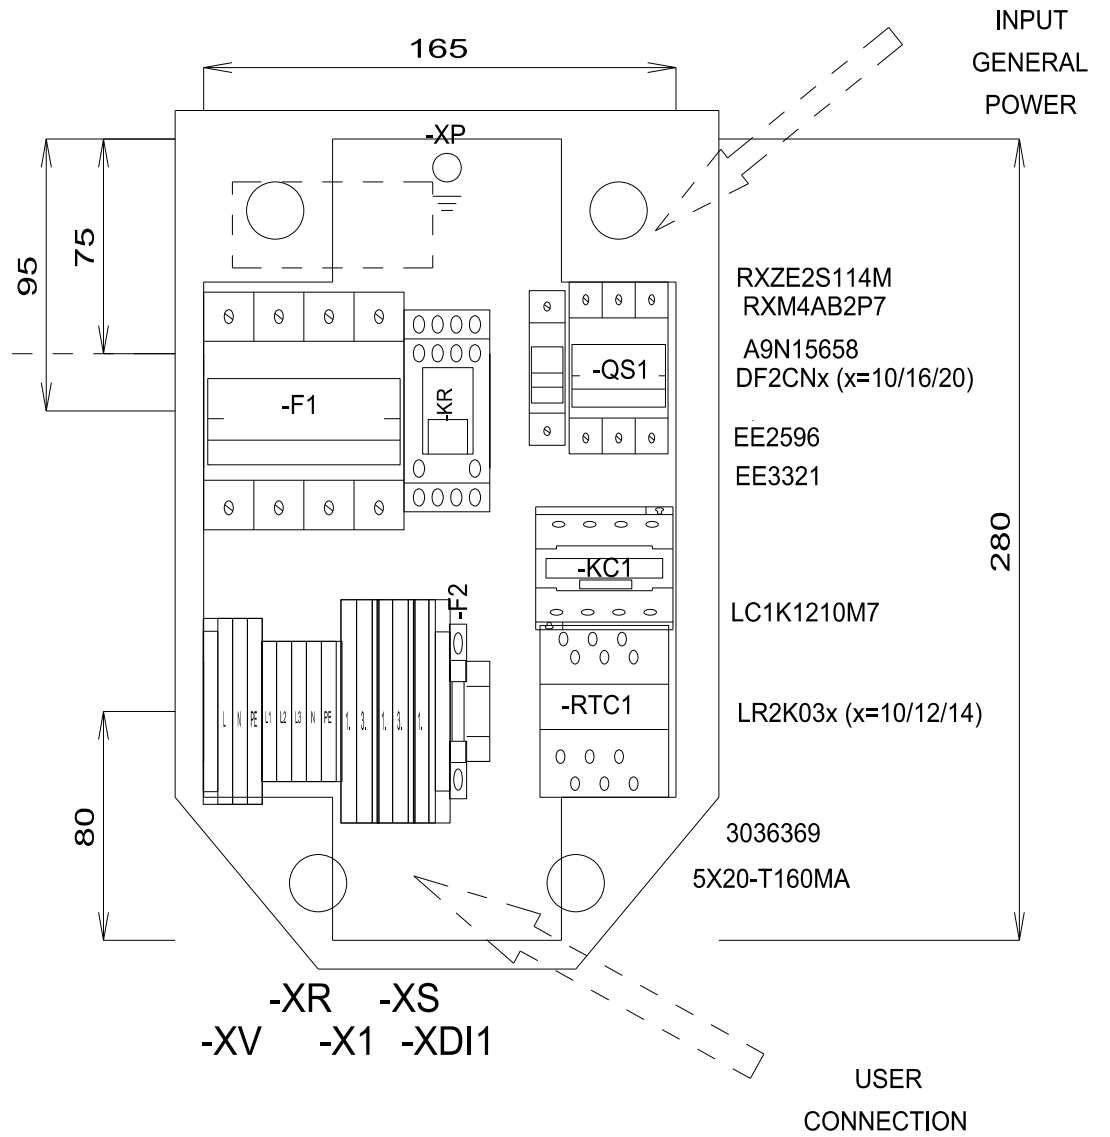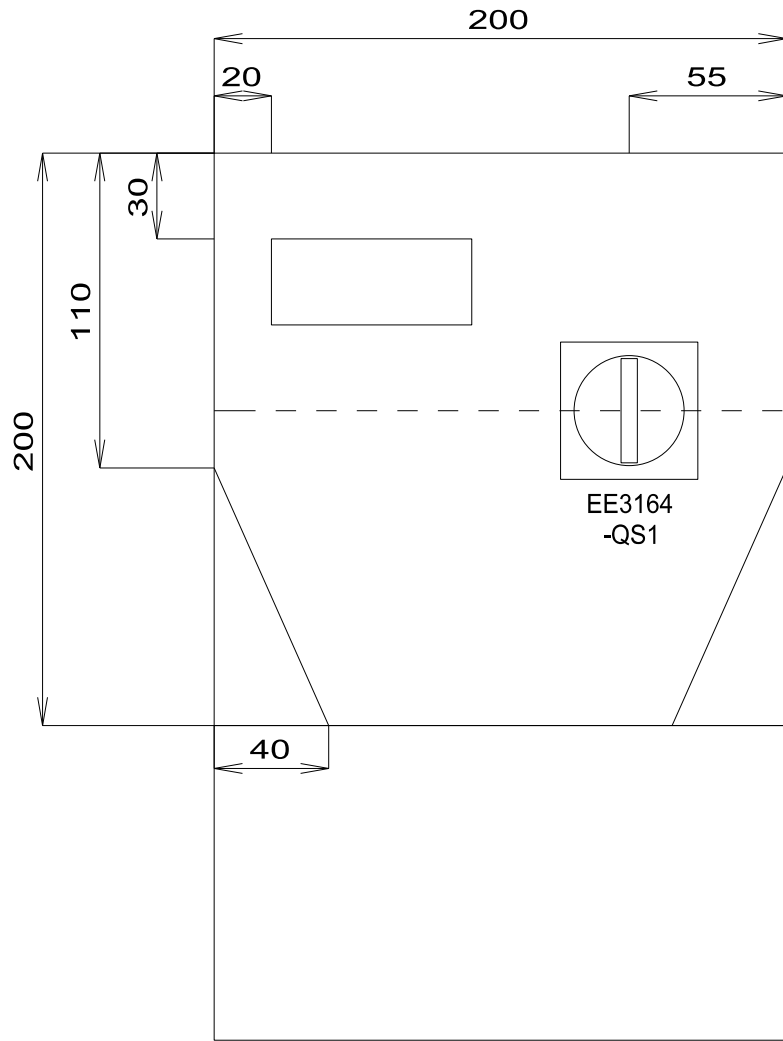

Drilling template

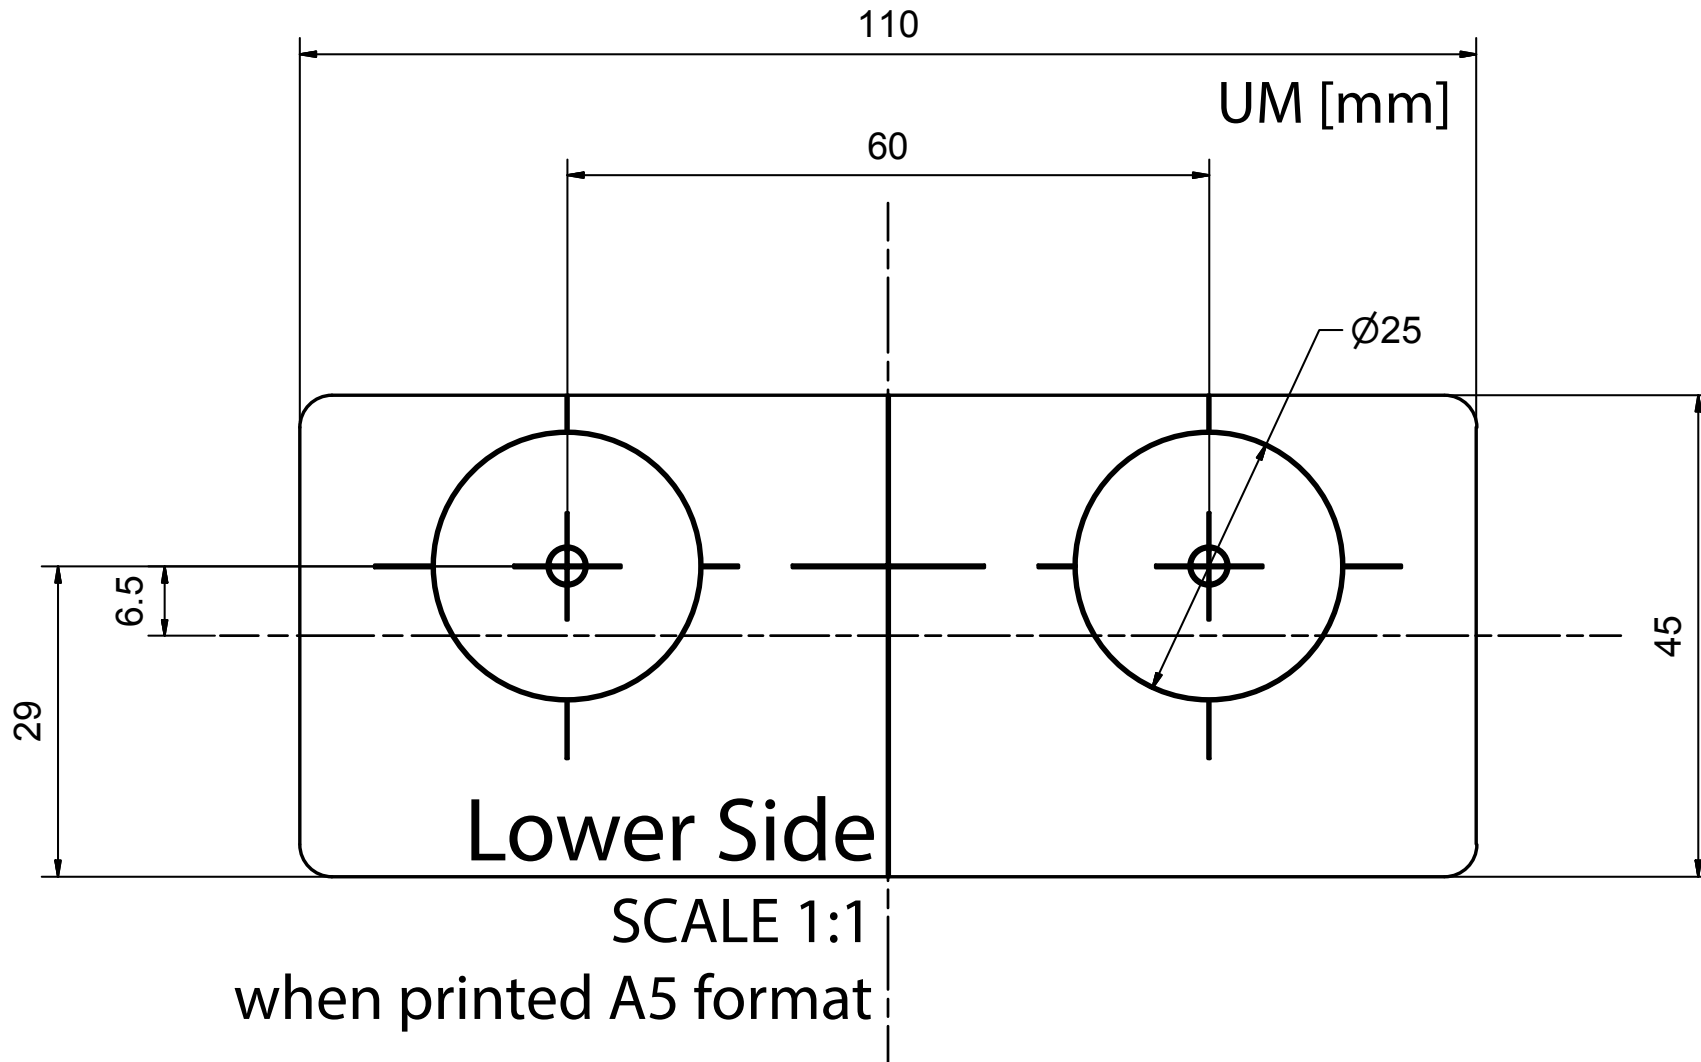

IDPanel 978

Instruction manual

9MA00274.00 EN 11/16

© 2016 Eliwell Controls srl

Eliwell Controls s.r.l.

Via dell'Industria, 15 • Z.I. Paludi

32010 Pieve d'Alpago (BL) ITALY

Telephone +39 0437 986 111

www.elowell.com

Customer Technical Support

Telephone +39 0437 986 300

E techsuppeliwell@schneider-electric.com

Sales

Telephone +39 0437 986 100 (Italy)

+39 (0) 437 986 200 (other countries)

E saleseliwell@schneider-electric.com